

CHAPTER 5 — INSPECTIONS AND COMPONENT OVERHAUL SCHEDULE

TABLE OF CONTENTS

Paragraph Number	Title	Chapter/Section Number	Page Number
------------------	-------	------------------------	-------------

INSPECTIONS AND COMPONENT OVERHAUL SCHEDULE

5-1	General	5-00-00	3
5-2	Items Not Covered and Inspection Responsibility	5-00-00	3
5-3	Crash Damage	5-00-00	4
5-4	Types of Inspections	5-00-00	4
5-5	Definitions	5-00-00	5
5-6	Inspection and Overhaul Tolerance	5-00-00	6

SCHEDULED INSPECTIONS

5-7	Scheduled Inspections	5-00-00	7
5-8	Airframe Inspection Program	5-00-00	7
5-9	Airframe Progressive Inspection Programs	5-00-00	7
5-10	100-Hour Airframe Progressive Inspection Program	5-00-00	7
5-11	300-Hour Airframe Progressive Inspection Program	5-00-00	8
5-12	Airframe Periodic Inspection Program	5-00-00	9
5-13	100-Hour Airframe Periodic Inspection Program	5-00-00	9
5-14	300-Hour Airframe Periodic Inspection Program	5-00-00	9
5-15	Changing Inspection Program	5-00-00	10
5-16	100-Hour Airframe Progressive Inspection — Event No. 1	5-00-00	17
5-17	100-Hour Airframe Progressive Inspection — Event No. 2	5-00-00	27
5-18	100-Hour Airframe Progressive Inspection — Event No. 3	5-00-00	33
5-19	100-Hour Airframe Progressive Inspection — Event No. 4	5-00-00	39
5-20	100-Hour Airframe Periodic Inspection	5-00-00	47
5-21	300-Hour Airframe Progressive Inspection — Event No. 1	5-00-00	49
5-22	300-Hour Airframe Progressive Inspection — Event No. 2	5-00-00	55
5-23	300-Hour Airframe Progressive Inspection — Event No. 3	5-00-00	63
5-24	300-Hour Airframe Progressive Inspection — Event No. 4	5-00-00	69
5-25	300-Hour Airframe Progressive Inspection — Event No. 5	5-00-00	75
5-26	300-Hour Airframe Progressive Inspection — Event No. 6	5-00-00	83
5-27	300-Hour Airframe Periodic Inspection	5-00-00	87
5-28	100-Hour Inspection	5-00-00	89
5-29	300-Hour Inspection	5-00-00	93
5-30	1000-Hour Inspection	5-00-00	101
5-31	1200-Hour Inspection	5-00-00	103
5-32	As Required by Manufacturer	5-00-00	109
5-33	Weekly Inspection	5-00-00	111
5-34	12-Month Inspection	5-00-00	113
5-35	12 Months of Component Operation	5-00-00	115
5-36	24-Month Inspection	5-00-00	117
5-37	60-Month Inspection	5-00-00	121
5-38	300-Hour or 12-Month Inspection	5-00-00	123
5-39	600 Hours of Component Operation	5-00-00	125
5-40	600 Hours or 12 Months of Component Operation	5-00-00	127
5-41	1200 Hours of Component Operation	5-00-00	129

TABLE OF CONTENTS (CONT)

Paragraph Number	Title	Chapter/Section Number	Page Number
5-42	1500 Hours of Component Operation	5-00-00	131
5-43	1500 Hours of Component Operation and Every 50 Hours Thereafter	5-00-00	133
5-44	2250 Hours or 60 Months of Component Operation	5-00-00	135
5-45	3000 Hours of Component Operation	5-00-00	137

SPECIAL INSPECTIONS

5-46	Special Inspections	5-00-00	139
5-47	After Fuel System Maintenance and/or Component Change	5-00-00	141
5-48	1 to 5 Hours After Each Installation	5-00-00	145
5-49	3 to 8 Hours After Each Installation	5-00-00	147
5-50	10 to 25 Hours After Each Installation	5-00-00	149
5-51	100 Hours After Each Installation	5-00-00	151

CONDITIONAL INSPECTIONS

5-52	Conditional Inspections	5-00-00	153
5-53	Hard Landing	5-00-00	155
5-54	Sudden Stoppage/Acceleration	5-00-00	161
5-55	Overspeed Main Rotor — 114% or Greater	5-00-00	169
5-56	Overtorque	5-00-00	173
5-57	Engine Compressor Stall or Surge	5-00-00	179
5-58	Lightning Strike	5-00-00	187
5-59	Engine Overtemp	5-00-00	193

COMPONENT OVERHAUL SCHEDULE

5-60	Component Overhaul Schedule	5-00-00	195
------	-----------------------------------	---------	-----

FIGURES

Figure Number	Title	Page Number
5-1	Maintenance Zones	15
5-2	Inspection of Main Rotor Flight Control Bolts/Nuts	118

TABLES

Table Number	Title	Page Number
5-1	100-Hour Airframe Progressive Inspection Events	7
5-2	300-Hour Airframe Progressive Inspection Events	8
5-3	300-Hour Airframe Progressive or 300-Hour Airframe Periodic Inspectio Program Prerequisites	11
5-4	Component Overhaul Schedule	195

INSPECTIONS AND COMPONENT OVERHAUL SCHEDULE

5-1. GENERAL

This chapter contains the time limit intervals and the requirements for the Scheduled Inspection, Special Inspection, Conditional Inspection, and for the Component Overhaul Schedule.

WARNING

FAILURE TO CORRECT CONDITIONS SUCH AS, BUT NOT LIMITED TO, CORROSION, EROSION, MECHANICAL DAMAGE, OR OBVIOUS WEAR FOUND DURING A SCHEDULED INSPECTION COULD SERIOUSLY AFFECT THE AIRWORTHINESS OF THE HELICOPTER.

The inspection intervals given in this chapter are the maximum permitted. Do not exceed these intervals. The owner/operator is responsible for increasing the scope and the frequency of the inspections as necessary. Make sure the helicopter is maintained safely during all unusual local changes, such as environmental conditions, helicopter use, etc. You can request changes to the requirements in this chapter through the local Aviation Authority.

The inspection intervals and the component overhaul schedule provided in this chapter are applicable only to Bell Helicopter Textron approved parts.

NOTE

The time period given for the overhaul of a component (or the failure to give a time period for the overhaul of a component) does not constitute a warranty of any kind. The only warranty applicable to the helicopter or any component is the warranty included in the Purchase Agreement for the helicopter or the component.

The Time Between Overhaul (TBO) and the inspection periods are determined through experience, tests, Lead The Fleet (LTF), or any other special programs and the judgement of Bell Helicopter Textron engineers. They are subject to change only by Bell

Helicopter Textron or an approved Airworthiness Authority.

Changes to the TBO will be introduced by either revision to the Maintenance Manual, Chapter 5 or a Technical Bulletin.

Every calendar and hourly inspection is a thorough visual inspection to determine the airworthiness of the helicopter and the components. Qualified persons must do the inspections in accordance with quality standard aircraft practices and the applicable maintenance manuals. Bell Helicopter Textron considers that it is mandatory to obey all the applicable Alert Service Bulletins (ASB) and the Airworthiness Directives (AD).

Component operating time records are necessary for components that have scheduled maintenance procedures, which are different from those of the airframe. It is the owner/operator's responsibility to keep the Historical Service Records for the applicable component and to do the necessary maintenance procedures.

Before each inspection, remove or open the necessary cowlings, fairing, inspection doors, and panels.

5-2. ITEMS NOT COVERED AND INSPECTION RESPONSIBILITY

This manual does not include the specific inspection intervals for some components such as the compass calibration and the pitot static test. These specific inspection intervals are given by your government regulatory authority. Refer to their requirements for these specific inspections.

The owner/operator of the helicopter is responsible for the maintenance done on the helicopter and for ensuring that the specific time interval of any inspection procedure is not exceeded. It is the owner/operator's responsibility to:

1. Establish, maintain, and review the log books for discrepancies.
2. Make sure the Alert Service Bulletins (ASB), the Airworthiness Directives (AD), and the special

inspections are done when they are required to be done.

3. Make sure the scheduled inspections, the special inspections, and the required inspections for all of the installed kits are complied with.

4. Make sure all parts and components for which Historical Service Records are required have documented traceability to their original installation in the helicopter.

5. Make sure all limited life parts that have completed their published operating limits are replaced.

6. Make sure all of the components that have completed their published overhaul periods are overhauled.

7. Make sure all of the maintenance that is done on the helicopter is done by an approved maintenance organization.

The maintenance organization/person doing the maintenance is responsible for the quality of the maintenance done.

The owner/operator may choose to ask the maintenance organization/person doing the maintenance to perform the tasks listed by prior arrangement through a separate formal agreement.

5-3. CRASH DAMAGE

Because of the many possible combinations that can result from crash damage, it is not possible to include the specific repair tasks in this category. The helicopter mechanic must make an analysis of the crash damage for each situation. Do the repair in accordance with the degree of damage to the specific part and the applicable repair procedures in this manual. Call Bell Helicopter Textron Product Support Engineering with your analysis of the crash damage.

5-4. TYPES OF INSPECTIONS

1. The maintenance procedures may include scheduled inspections, special inspections, conditional inspections, component interim inspections, and component overhaul inspections.

a. Scheduled inspections must occur at specified operating intervals. The intervals may be in operating time (hours), cycles, torque events (RIN), calendar (days, months, years) or other assigned units. This makes sure that the helicopter is airworthy.

b. Special inspections are of a temporary nature or of a special interval that is not consistent with the scheduled inspections.

c. Conditional inspections do not occur at a specified time. A conditional inspection is the result of a known or suspected unusual event, known or suspected malfunctions, or defects.

d. An interim inspection occurs between overhauls.

e. The component overhaul schedule gives the elapsed operating time at which a component must be removed, disassembled, examined for condition, and overhauled, in accordance with data approved by Bell Helicopter Textron.

2. Lubrication and servicing requirements are in addition to those stated in this chapter ([Chapter 12](#)).

3. For corrosion control, refer to the Corrosion Control Guide, [CSSD-PSE-87-001](#) and the [BHT-ALL-SPM](#).

4. For the 250-C30 series engine, refer to the Rolls-Royce Operations and Maintenance Manual (14W2) for the scheduled inspection, special inspection, conditional inspection, and component overhaul schedule.

5. For the common Bell Helicopter Textron approved optional equipment that is integrated into this Maintenance Manual, refer to this chapter for the scheduled inspection, conditional inspection, component interim inspection, and component overhaul inspection.

6. For all other Bell Helicopter Textron approved equipment, refer to the applicable information in this Maintenance Manual or the specific Service Instruction (SI) for the scheduled inspection, special inspection, conditional inspection, component interim inspection, and component overhaul inspection.

7. For the inspection requirements for optional equipment approved under Supplement Type

Approval/Certificate (STA/STC), refer to the applicable STA/STC documentation. Maintenance and inspection of these items are the responsibility of the owner/operator.

5-5. DEFINITIONS

- Check, inspect, examine — Look carefully to find the condition of the component. Find how that condition relates to a specific standard.
- Condition — The state of an item compared to a known standard.
- Security — The presence of attaching parts that are properly tightened or appear to be, and the presence of properly installed (as required) locking devices such as lockwire, cotter pins, or other.
- Standard — A specified rule or measure that you use to find the condition of a component.
- Damage — Physical deterioration of a component.
- Discard — Reject a component that has damage that cannot be repaired. To permanently remove from service.
- Inspection — A procedure that includes checking, inspecting, and examining a system or a component.
- Non-scheduled inspection — An inspection that has not been scheduled.
- Periodic inspection — An inspection that is repeated at equal time intervals.
- Progressive inspection — A scheduled inspection that is divided into smaller segments. This makes the best use of the time and the resources available.
- Maintenance — The servicing and/or the repair of a helicopter, a system, or a component that keeps it serviceable.
- Preventive maintenance — To do small maintenance action(s) on a regular basis to prevent non-scheduled maintenance.
- Operating time — Actual flight or calendar time that must be recorded in the Historical Service Records or in the helicopter logs. The operating time is specified as:
 - Time in service (flight time) — The measured time that starts the moment the helicopter leaves the ground and continues until it touches the ground at the next point of landing. The time when the helicopter is on the ground, with the engine and the rotor turning, is not included.
 - Calendar time — The elapsed time starts on the day the inspection is completed, the component is installed, or the rotor is turned for the first time and ends on the last day of the month that the time limit expires. Calendar time is continuous. Calendar time does not stop when you remove a component, put the helicopter in storage, etc.
- Maintenance zone — A specified area of the helicopter that may contain more than one system or more than one group of related components. Maintenance zones ([Figure 5-1](#)) are used when you do a progressive inspection.
- Lead-The-Fleet (LTF) Program — This is a program to validate the performance of an approved product improvement or a change to a maintenance interval. The engineering aspects of this change are approved. The program is closely monitored by Bell Helicopter Textron in an operational environment with selected operators.
- Special Programs — These are approved programs that may be initiated under certain special conditions to meet specific requirements. These programs will be clearly defined through a plan and the engineering and maintenance aspects will be approved by the regulatory authorities.

5-6. INSPECTION AND OVERHAUL TOLERANCE

WARNING

DO NOT APPLY THESE TOLERANCES
TO PARTS WITH A LIMITED
AIRWORTHINESS LIFE ([CHAPTER 4](#)).

The Bell Helicopter Textron approved tolerance for scheduled inspections, special inspections, interim inspections, and overhaul intervals, unless otherwise stated, is 10% or up to a maximum of 300 hours operating time/6 months calendar time, whichever is less. The tolerances are established for maintenance scheduling convenience only.

Scheduled inspections, special inspections, interim inspections, or overhaul intervals required beyond the stated tolerances must be approved by Product Support Engineering.

NOTE

The following is only applicable for those operators whose governing aviation authority requires to specifically approve the inspection and overhaul tolerance.

If approval of the inspection and overhaul tolerance is required by the applicable governing aviation authority, this is the responsibility of the owner/operator.

Refer to the Rolls-Royce 250-C30 Operation and Maintenance Manual (14W2) for inspection and overhaul tolerances.

SCHEDULED INSPECTIONS

5-7. SCHEDULED INSPECTIONS

WARNING

FAILURE TO CORRECT CONDITIONS SUCH AS, BUT NOT LIMITED TO, CORROSION, EROSION, MECHANICAL DAMAGE, OR OBVIOUS WEAR FOUND DURING A SCHEDULED INSPECTION COULD SERIOUSLY AFFECT THE AIRWORTHINESS OF THE HELICOPTER.

Scheduled inspections include the airframe and the component inspections. The scheduled airframe inspection intervals are related to the airframe operating time. The component inspection intervals are related to the component operating time.

5-8. AIRFRAME INSPECTION PROGRAM

Bell Helicopter Textron has developed airframe inspection programs to provide you with the flexibility to permit maximum helicopter use. Depending on the configuration of the helicopter, a 100 or 300-hour airframe progressive inspection as well as a 100 or 300-hour airframe periodic inspection is available. You may choose one of these Bell Helicopter inspection programs or you can design your own program. You are responsible for the selection of an inspection program and for its approval by the governing civil aviation authority.

5-9. AIRFRAME PROGRESSIVE INSPECTION PROGRAMS

If you choose one of the airframe progressive inspection programs, you must first get approval from your local airworthiness authority. The progressive inspections are divided into separate events of similar workload ([Table 5-1](#), [Table 5-2](#), and [Figure 5-1](#)).

NOTE

All conditions of [Table 5-3](#) must be met to utilize the 300-hour airframe progressive inspection.

Depending on the helicopter configuration, you have the option to either use the 100-hour airframe

progressive inspection program or the 300-hour airframe progressive inspection program. To determine helicopter eligibility to utilize the 300-hour airframe progressive inspection program, refer to [Table 5-3](#).

5-10. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION PROGRAM

The 100-hour airframe progressive inspection program has 4 events. Events occur at intervals of 25 hours. After you complete event No. 4, the cycle begins again with event No. 1 ([Table 5-1](#)). You must do a minimum of one complete cycle (all four events) within 12 calendar months. If you do not complete all four events in a 12 calendar month period, the remaining events must be completed prior to operating the helicopter.

Table 5-1. 100-Hour Airframe Progressive Inspection Events

AIRFRAME HOURS	EVENT NUMBER	MAINTENANCE ZONES
25	1	1, 2, and 3
50	2	4 and 5
75	3	6
100	4	7, 8, 9, and 10

In addition to performing the 100-hour airframe progressive inspection program, you also need to perform and record the following scheduled inspections:

NOTE

Every 300 hours of operation, helicopters completing the 100-hour airframe progressive inspection program also need to accomplish the 300-hour inspection.

- 300-hour inspection
- 1000-hour inspection
- 1200-hour inspection

- As required by manufacturer
- Weekly inspection
- 12-month inspection
- 12 months of component operation
- 24-month inspection
- 60-month inspection
- 300-hour or 12-month inspection
- 600 hours of component operation
- 600 hours or 12 months of component operation
- 1200 hours of component operation
- 1500 hours of component operation
- 1500 hours of component operation and every 50 hours thereafter
- 2250 hours or 60 months of component operation
- 3000 hours of component operation

5-11. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION PROGRAM

The 300-hour airframe progressive inspection program has 6 events. Events occur at intervals of 50 hours. After you complete event No. 6, the cycle begins again with event No. 1 (Table 5-2). You must do a minimum of one complete cycle (all six events) within 12 calendar months. If you do not complete all six events in a 12 calendar month period, the remaining events must be completed prior to operating the helicopter.

Table 5-2. 300-Hour Airframe Progressive Inspection Events

AIRFRAME HOURS	EVENT NUMBER	MAINTENANCE ZONES
50	1	1 and 2
100	2	3

Table 5-2. 300-Hour Airframe Progressive Inspection Events (Cont)

AIRFRAME HOURS	EVENT NUMBER	MAINTENANCE ZONES
150	3	4
200	4	5 and 6
250	5	7 and 8
300	6	9 and 10

In addition to performing the 300-hour airframe progressive inspection program, you also need to perform and record the following scheduled inspections:

NOTE

Helicopters completing the 300-hour airframe progressive inspection program also need to accomplish the 100-hour inspection.

- 100-hour inspection
- 1000-hour inspection
- 1200-hour inspection
- As required by manufacturer
- Weekly inspection
- 12-month inspection
- 12 months of component operation
- 24-month inspection
- 60-month inspection
- 300-hour or 12-month inspection
- 600 hours of component operation
- 600 hours or 12 months of component operation
- 1200 hours of component operation
- 1500 hours of component operation

- 1500 hours of component operation and every 50 hours thereafter
- 2250 hours or 60 months of component operation
- 3000 hours of component operation

5-12. AIRFRAME PERIODIC INSPECTION PROGRAM

The airframe periodic inspection combines all of the events of the 100 or 300-hour progressive inspection into one event.

NOTE

All conditions of [Table 5-3](#) must be met to utilize the 300-hour airframe periodic inspection.

Depending on the helicopter configuration, you have the option to either use the 100-hour airframe periodic inspection program or the 300-hour airframe periodic inspection program. To determine the helicopter eligibility to utilize the 300-hour airframe periodic inspection program, refer to [Table 5-3](#).

5-13. 100-HOUR AIRFRAME PERIODIC INSPECTION PROGRAM

Do a 100-hour airframe periodic inspection program every 12 calendar months or every 100 hours, whichever occurs first. You must do a minimum of one complete 100-hour airframe periodic inspection within 12 calendar months.

In addition to performing the 100-hour airframe periodic inspection program, you also need to perform and record the following scheduled inspections:

NOTE

Every 300 hours of operation, helicopters completing the 100-hour airframe periodic inspection program also need to accomplish the 300-hour inspection.

- 300-hour inspection
- 1000-hour inspection
- 1200-hour inspection

- As required by manufacturer
- Weekly inspection
- 12-month inspection
- 12 months of component operation
- 24-month inspection
- 60-month inspection
- 300-hour or 12-month inspection
- 600 hours of component operation
- 600 hours or 12 months of component operation
- 1200 hours of component operation
- 1500 hours of component operation
- 1500 hours of component operation and every 50 hours thereafter
- 2250 hours or 60 months of component operation
- 3000 hours of component operation

5-14. 300-HOUR AIRFRAME PERIODIC INSPECTION PROGRAM

Do a 300 Hour Airframe Periodic Inspection Program every 12 calendar months or every 300 hours, whichever occurs first. You must do a minimum of one complete 300 Hour Airframe Periodic Inspection within 12 calendar months.

In addition to performing the 300-hour airframe periodic inspection program you also need to perform and record the following scheduled inspections:

NOTE

Helicopters completing the 300-hour airframe periodic inspection program also need to accomplish the 100-hour inspection.

- 100-hour inspection
- 1000-hour inspection

- 1200-hour inspection
- As required by manufacturer
- Weekly inspection
- 12-month inspection
- 12 months of component operation
- 24-month inspection
- 60-month inspection
- 300-hour or 12-month inspection
- 600 hours of component operation
- 600 hours or 12 months of component operation
- 1200 hours of component operation
- 1500 hours of component operation
- 1500 hours of component operation and every 50 hours thereafter
- 2250 hours or 60 months of component operation
- 3000 Hours of Component Operation

5-15. CHANGING INSPECTION PROGRAM

You must use either the airframe periodic inspection program or the airframe progressive inspection program from the start. You can change between the two programs at any airframe operating time as follows:

- To change from a 100-hour airframe progressive inspection program to a 100-hour airframe periodic inspection program, do a complete 100-hour airframe periodic inspection.
- To change from a 100-hour airframe periodic inspection program to a 100-hour airframe progressive inspection program, do a complete 100-hour airframe periodic inspection.
- To change from a 300-hour airframe progressive inspection program to a 300-hour airframe periodic inspection program, do a complete 300-hour airframe periodic inspection.
- To change from a 300-hour airframe periodic inspection program to a 300-hour airframe progressive inspection program, do a complete 300-hour airframe periodic inspection.

Table 5-3. 300-Hour Airframe Progressive or 300-Hour Airframe Periodic Inspection Program Prerequisites


NOMENCLATURE	PART NUMBER 	BULLETIN REFERENCE	ACCEPTABLE ALTERNATES	206L	206L1	206L3	206L4	206L1+ AND 206L3+ IGW UPGRADE
Swashplate and Support Assembly	206-010-450-123	TB 206L-00-201	206-010-450-101 is an acceptable alternate to 206-010-450-123.				X	X
	206-010-450-131	TB 206L-00-201		X	X	X		
Main Rotor Hub Assembly	206-011-100-105	TB 206L-91-152	206-011-100-159 is an acceptable alternate provided ASB 206L-97-108 is accomplished.	X	X	X	X	X
Tail Rotor Hub Assembly	206-011-810-153	TB 206L-09-239		X	X	X	X	X
Tailboom Attachment Fittings and Longerons Assembly	206-031-314-157A or 206-031-314-217B	TB 206L-07-226 or PSE Instructions		X	X	X	X	X
Forward Engine Mount Fittings	206-031-629-103	BHT-206-SRM		X	X	X	X	X
Tailboom Assembly	206-033-004-175/-177 or equivalent with ASB 206L-99-115 accomplished	TB 206L-05-220	206-033-004-181, -199, or -203 and 206-704-727-101.	X	X	X	X	X
Transmission Restraint	206-033-506-103		206-033-506-107 and -109 are acceptable alternates to 206-033-506-103.	X	X	X	X	X
Transmission Assembly	206-040-004-107	TB 206L-91-153 TB 206L-08-229		X	X	X		
	206-040-004-115						X	X

Table 5-3. 300-Hour Airframe Progressive or 300-Hour Airframe Periodic Inspection Program Prerequisites (Cont)

NOMENCLATURE	PART NUMBER 	BULLETIN REFERENCE	ACCEPTABLE ALTERNATES	206L	206L1	206L3	206L4	206L1+ AND 206L3+ IGW UPGRADE
Mast Assembly	206-040-014-103	TB 206L-99-195		X	X	X		
	206-040-014-107	TB 206L-99-195					X	X
Main Driveshaft Assembly (Grease Lubricated)	206-040-015-011	ASB 206L-93-91		X				
	206-040-015-015	ASB 206L-93-91			X	X		
Freewheel Assembly	206-040-270-117	TB 206L-01-205		X				
	206-040-270-123	TB 206L-01-205			X	X		
Riveted Aft Short Shaft	206-040-383-101	TB 206L-02-207					X	X
Riveted Tail Rotor Driveshaft Assembly	206-040-387-101	TB 206L-02-207	206-040-370-107/-109/-115 are acceptable fielded substitutes for 206-040-387-101.	X	X	X	X	X
Tail Rotor Gearbox Assembly	206-040-402-111	TB 206L-99-197	206-040-402-101/-107 are acceptable fielded substitutes for 206-040-402-111.	X	X	X	X	X
Oil Cooler Blower Impeller	206-061-432-109	ASB 206L-86-40		X	X	X	X	X
Main Driveshaft Assembly (KAflex)	206-340-300-105	ASB 206L-01-123 TB 206L-01-204	206-340-300-105M is an acceptable fielded substitute for 206-340-300-105.				X	X
Freewheel Assembly	406-040-500-113 with TB 206L-02-208 and ASB 206L-07-147 accomplished.	TB 206L-01-205					X	X

Table 5-3. 300-Hour Airframe Progressive or 300-Hour Airframe Periodic Inspection Program Prerequisites (Cont)

NOMENCLATURE	PART NUMBER 	BULLETIN REFERENCE	ACCEPTABLE ALTERNATES	206L	206L1	206L3	206L4	206L1+ AND 206L3+ IGW UPGRADE
Aft Fuselage Bulkhead	407-030-027-103	TB 206L-07-226		X	X	X	X	X
FACET Scavenge Oil Filter System 	Purolator Kit Number STC # SH200GL			X	X	X	X	X
NOTES: 1. Table 5-3 is not to be used as a configuration listing for the installation of components on 206L Series Helicopters. It is only provided as a prerequisite listing to determine applicability to use the 300-hour airframe progressive inspection program or 300-hour airframe periodic inspection program, as applicable. Refer to the bulletins listed within the table for configuration data as required.  To qualify for the 300-hour airframe progressive inspection program or the 300-hour airframe periodic inspection program, the helicopter must have all of the parts listed installed (or subsequent part numbers to those listed based on configuration/eligibility requirements). 3. If the helicopter does not have all of the parts listed in this table installed, the helicopter is limited to either the 100-hour airframe progressive inspection or the 100-hour airframe periodic inspection.  FACET scavenge oil filter system available from Purolator Facet, Inc., www.purolator-facet.com .								

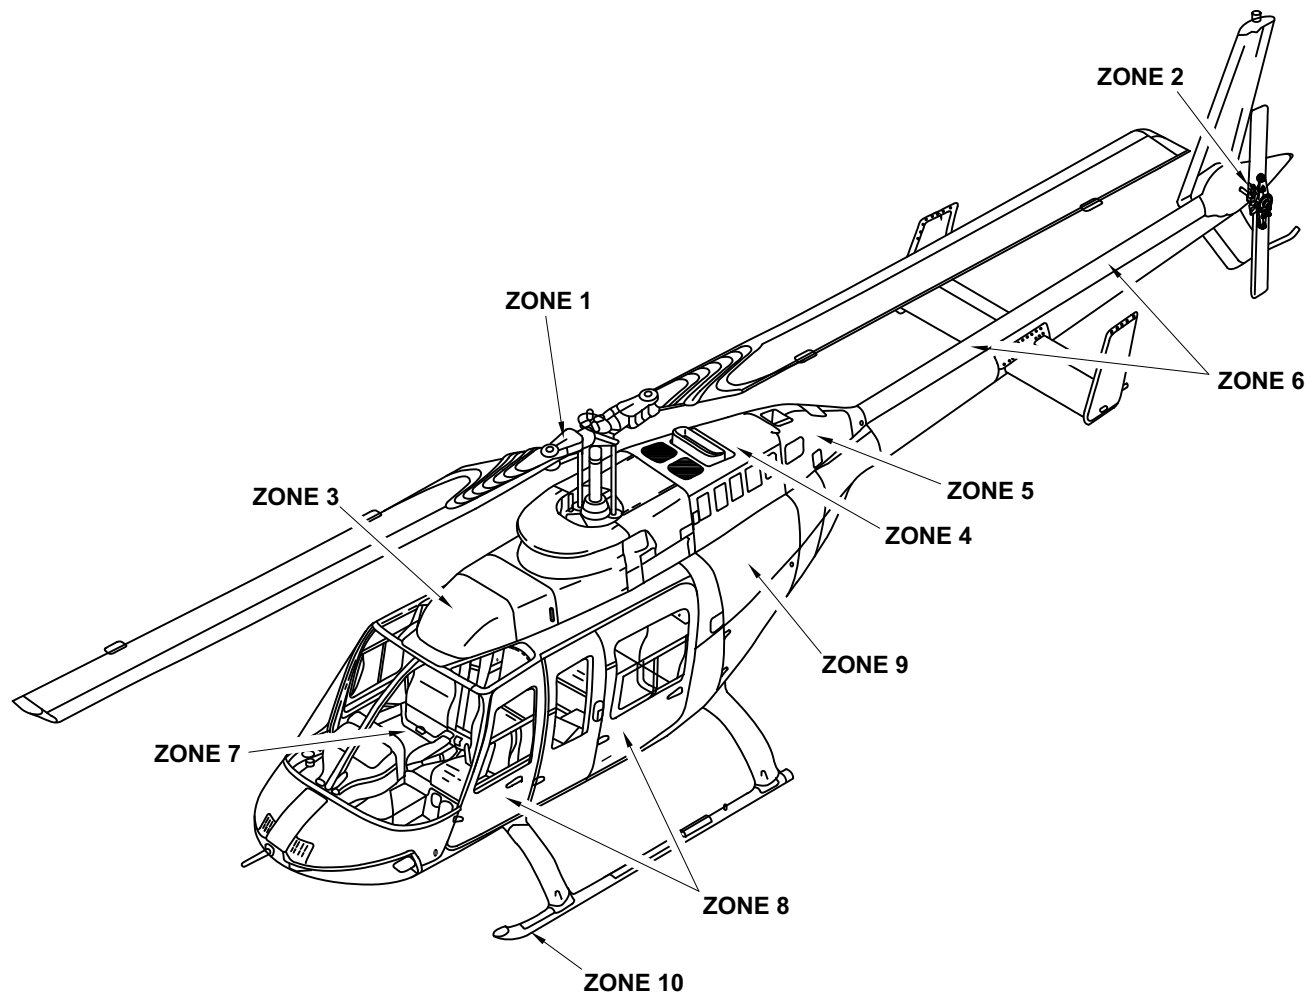

- Zone 1 - Main rotor hub and blade assembly
- Zone 2 - Tail rotor hub and blade assembly
- Zone 3 - Forward top deck
- Zone 4 - Power plant
- Zone 5 - Aft top deck
- Zone 6 - Tailboom
- Zone 7 - Cabin interior
- Zone 8 - Forward fuselage
- Zone 9 - Aft fuselage
- Zone 10 - Landing gear

206L4_MM_05_0001

Figure 5-1. Maintenance Zones

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 1 — MAIN ROTOR SYSTEM <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Make sure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>MAIN ROTOR SYSTEM</u> 1. Verify main rotor flap restraint for freedom of movement, and for condition and security. 2. Examine static stops and mast for evidence of mast bumping. 3. Remove main rotor blade leading edge erosion protection tape, if installed. 4. Examine main rotor blades for cleanliness and overall condition. Examine for cracks, corrosion and de-bonding of doublers. 5. Examine leading edge of blades for corrosion and erosion. Restore contour as necessary. 6. Examine the tip weight cap for corrosion, cracks, erosion, and deformation.		

Chapter 11

Chapter 62

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	7. If applicable, reinstall main rotor blade leading edge erosion protection tape. 8. Examine the following main rotor hub assembly components for condition and security: a. Mast nut b. Trunnion c. Pillow blocks d. Grips e. Pitch horns f. Static stops 9. Examine pitch horn trunnion bearings for evidence of wear, damage, and for security. 10. Torque check pillow block retention hardware 84 to 107 inch-pounds (9.4 to 12 Nm). Examine for misalignment of anti-slippage marks (ASB 206L-97-108). 11. Examine main rotor yoke for corrosion or mechanical damage as follows: a. Examine fillet radius of both yoke spindles inboard of wear sleeves for evidence of corrosion. If corrosion is visible, remove with fine abrasive pad (C-407). If corrosion cannot be removed with pads, or is extensive, disassemble hub for inspection and repair. NOTE If the main rotor hub must be disassembled, omit remaining steps. b. Examine entire yoke centre section (inboard and outboard surfaces) for damage.		

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	c. Touch up all repaired areas or areas of bare metal in accordance with applicable main rotor hub inspection and repair instructions. d. Ensure no sealant voids are visible around shields or wear sleeve, strap fittings, and grip closure. Recoat with sealant (C-308) as required. On main rotor hub assemblies up to and including P/N 206-011-100-025, coat the remaining exposed fillet radius and repaired surfaces with a film of corrosion preventive compound (C-101). ZONE 2 — TAIL ROTOR ASSEMBLY <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Make sure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter.		
Chapter 11			
Chapter 64	<u>TAIL ROTOR ASSEMBLY</u> 1. Clean tail rotor blades to maintain visibility of warning stripes.		
BHT-206L-CR&O	2. Examine the following tail rotor hub assembly components for condition and security of attachment: a. Yoke b. Pitch horns c. Trunnion and trunnion caps d. Counterweight hardware		
Chapter 64	3. Examine tail rotor blades as follows: a. Tip block rivets for damage, corrosion, erosion, and looseness. b. Skin for bulges, nicks, dents, scratches, or other damage.		

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 11	c. Deformed or cracked skin in the area of the chordwise weights. d. Leading edge for erosion, nicks, dents or scratches. e. Bonded joints of blade skin mating area for suspected voids or cracks. Pay particular attention in the area of tip block and doublers. f. Feathering bearings for looseness and cracks in uniball. 4. Examine the following tail rotor hub and blade assembly attaching components for condition and security: a. Spacer b. Rubber bumper c. Static stop d. Nut e. Balance wheel ZONE 3 — FORWARD DECK <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Make sure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter.		
	<u>AIRFRAME (FORWARD DECK)</u> 1. Open and examine forward fairing for condition and security. 2. Remove and examine transmission cowling for condition. 3. Examine all fairing and cowling latches and/or fasteners for condition 4. Examine top deck for condition, leaks and security.		

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 53	5. Clean transmission deck. 6. Examine air induction cowling and plenum for damage, obstructions and cleanliness. Examine intake fairing windows for damage and cleanliness. 7. Examine inlet screen (if applicable) for missing or damaged wires and rivets. 8. Examine particle separator (if applicable) vortex tubes, ejector tubes, and ejector nozzles for cleanliness, condition, and security. 9. Examine forward deck drain(s) to ensure absence of obstruction. 10. Examine antennas for condition and security.		
Chapter 67	<u>CONTROLS</u> 1. Examine the following flight control components for signs of interference, corrosion, wear, mechanical damage and security: a. Control tubes. b. Links. c. Rod and bearings. d. Bellcranks. e. Bellcrank supports. f. Attaching bolts and nuts. 2. Inspect main rotor pitch links with a 3X magnifying glass for damage, corrosion and cracks. Give particular attention to swaged ends at jam nut or inserts.		
Chapter 76	3. Examine N₂ control linkages on forward deck for condition and security. Pay particular attention to the jackshaft assembly for damage or evidence of twisting.		

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 62	4. Verify all control tubes and bellcranks for freedom of travel throughout range.		
	<u>SWASHPLATE ASSEMBLY AND MAST</u>		
	1. Clean swashplate assembly and mast.		
	2. Disconnect main rotor pitch links from outer ring.		
	3. Disconnect idler (drive) link from outer ring.		
	4. Examine swashplate drive assembly for axial, radial, and accumulative wear.		
	5. Disconnect boot from swashplate outer ring and lift up temporarily. Examine boot for evidence of deterioration.		
	6. Verify condition of duplex bearing, before lubrication, as follows:		
	a. Rotate outer ring to check duplex bearing for condition. Bearing must be smooth and show no evidence of roughness, binding, dragging, or looseness.		
	7. Examine pivot sleeve slot sidewalls for wear or deterioration.		
	8. Examine pivot sleeve bearings for wear, deterioration and evidence of excessive axial play between pivot sleeve and swashplate support.		
	9. Examine collar set bushings for cracks and damage.		
	10. Examine swashplate support and uniball surfaces for condition.		
	11. Examine collective lever to sleeve assembly pins for condition.		
	12. Examine inner ring for condition. Examine for evidence of contact with sleeve assembly.		
	13. Examine outer ring for condition.		

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	14. Examine the upper inside diameter of swashplate support for evidence of contact with the mast pole. 15. Connect and secure boot, idler (drive) link and main rotor pitch links to outer ring. 16. Examine swashplate assembly for condition and security.		
Chapter 63	17. Examine mast for condition.		
Chapter 62	18. Ensure no sealant voids are visible around the swashplate drive collar set. Re-coat with adhesive (C-307) as required.		
Chapter 29	<u>HYDRAULIC SYSTEM</u> 1. Examine rigid and flexible fluid lines for chafing, leaks and security. 2. Examine hydraulic pump for leaks and general condition. 3. Examine hydraulic reservoir for leaks and general condition. 4. Examine servo actuators for leaks, condition and security. 5. Examine servo actuator support for condition.		
Chapter 67	6. Verify linkage pivot bolts on hydraulic servo actuators for freedom of rotation and security.		
	7. Examine hydraulic filter red indicator button (two locations). Button should not be extended.		
Chapter 12	8. Verify fluid level in hydraulic tank. Replenish as required. Replace fluid if color has changed color or if fluid emits bad odor.		
	9. Examine manifold, relief valve, and solenoid valve for leaks, condition and security.		
Chapter 63	<u>TRANSMISSION AND PYLON ASSEMBLY</u> 1. Examine the following pylon support components:		

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	a. Transmission link assemblies and bearings for damage and deterioration. b. Nodal beam flexures for condition and security. c. Forward and aft nodal beam deck supports for condition and security. d. Nodal beam stops for evidence of excessive contact with nodal beam arms. e. Transmission restraint for damage and spherical bearings for excessive wear and security. f. Stop mount for condition and security. Stop mount bushings for wear. g. All pylon support elastomeric components for evidence of deterioration. h. All pylon support hardware for security of attachment. 2. Examine transmission assembly for condition and security. 3. Examine transmission assembly for evidence of oil leakage. 4. Examine all fluid lines for chafing, damage and evidence of leakage. 5. Examine transmission oil for evidence of contamination. 6. Examine transmission oil filter bypass indicator for condition. Bypass button should not be extended. 7. Inspect all transmission chip detectors for accumulated material. 8. Perform functional test of all transmission chip detectors. 9. Ensure no sealant voids are visible around forward and aft nodal beam deck mounted supports and isolation mount. Recoat with sealant (C-308) as required.		

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 63	<u>MAIN DRIVESHAFT</u> 1. Examine main driveshaft as follows: NOTE TEMP-PLATE indicator dots are of a white or gray color that turn black when exposed to an overtemperature condition. Chemical contamination can also cause the indicating dots to turn black. a. For 206L3 helicopters, examine main driveshaft for visual damage and couplings for grease leakage. Check driveshaft for freedom and smoothness of axial movement. Inspect bolts for security. Inspect TEMP-PLATES for evidence of overheating indication, deterioration, debonding, or excessive discoloration of the epoxy overcoating. 2. For 206L3+ IGW Upgrade helicopters, examine the engine to transmission KAflex driveshaft for condition and security. Examine the components as follows: a. Driveshaft for cracks, corrosion, and surface damage. b. Flexframe and bolts for condition and signs of slippage.		
Chapter 96	<u>ELECTRICAL</u> 1. Examine all electrical components, wires, cables and connectors in the area of the forward deck and transmission for chafing, general condition, and security. <u>GROUND RUN</u>  GROUND RUN OF HELICOPTER TO BE ACCOMPLISHED BY QUALIFIED PERSONNEL ONLY.		
Chapter 12	1. Make sure applicable servicing requirements have been carried out.		

PROGRESSIVE INSPECTIONS

5-16. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade)	2. Check oil level of transmission, hydraulic tank, engine and rail rotor gearbox prior to running helicopter.		
	3. Make sure that helicopter is ready for ground run and that surrounding area is clear.		
	4. Start the helicopter and conduct ground run at 100% N_R to check for leaks and ensure all systems are operational and parameters are within Flight Manual limitations.		

PROGRESSIVE INSPECTIONS

5-17. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 4 — POWER PLANT <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>AIRFRAME (POWER PLANT AREA)</u> 1. Examine firewalls for condition and security. 2. Examine engine pan area for evidence of loose fasteners and damage. Restore cracked or missing sealant form engine pan. 3. Examine engine pan drains. Make sure that they are not clogged. 4. Examine airframe fuel filter assembly for evidence of leakage and security. 5. Examine engine mount legs for condition and security. Pay particular attention for loose fasteners. 6. Examine engine mount fittings for condition and security. 7. Examine rotor brake (if installed) for condition and security.		
Chapter 11			
Chapter 71			
Chapter 28			
Chapter 71			
Applicable Service Instruction			

PROGRESSIVE INSPECTIONS

5-17. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96	8. Examine the primary electrical ground connection in engine pan area for condition and security		
	<u>POWER PLANT</u>		
Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2	1. Perform engine inspection per the applicable Rolls-Royce Operation and Maintenance Manual.		
Chapter 71	2. Examine engine inlet bellmouth for obstruction and general condition.		
	3. Examine engine compartment hardware for security of attachment.		
	4. Examine engine for evidence of fuel or oil leaks.		
	5. Examine all flexible and rigid lines for condition and security.		
	a. Pay particular attention for chafing damage and kinked lines.		
	6. Examine exhaust stack for condition and security.		
	7. Examine all engine-mounted accessories for condition and security.		
Chapter 75	8. Examine the engine anti-ice solenoid valve for condition and security.		
Chapter 76	9. Inspect fuel control lever bolt hole and bolt for wear. Replace parts as required.		
Chapter 71	10. Inspect engine chip detectors for accumulated material.		
Chapter 96	11. Perform operational check of all engine chip detectors.		
Chapter 76	12. Examine engine controls for condition and security.		
	13. Verify operation of engine N ₁ control as follows:		
	a. Ensure proper throttle friction.		

PROGRESSIVE INSPECTIONS

5-17. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 71	b. Check freedom of full throttle grip travel and idle release operation. Return to closed position. Check copilot throttle if installed. c. Ensure fuel control stop lever contact with minimum and maximum stops before throttle grip reaches travel limit. NOTE If dual controls are installed, it is permissible for pointer to be 0.078 inch (1.98 mm) below 40° mark when copilot twist grip is used. d. Rotate throttle grip to idle detent, fuel control pointer should be no more than 0.01 inch (0.25 mm) below the 40° mark on the quadrant. e. Verify control linkage for excessive looseness, lost motion, and binding. 14. Verify operation of engine N₂ control as follows: a. Position N₂ governor actuator to full DECREASE (extended). b. Lift collective stick full up. c. Position N₂ governor actuator to full INCREASE (retracted). d. Verify for clearance between governor stop and lever stop arm. e. Lower collective stick full down. f. Position N₂ governor actuator to full DECREASE (extended). g. Verify for clearance between governor stop and lever stop arm. h. Verify control linkage for excessive looseness, lost motion, and binding.		

PROGRESSIVE INSPECTIONS

5-17. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	<u>DRIVETRAIN</u>		
Chapter 63	1. Examine freewheel assembly for condition, leaks, and security.		
Chapter 63 Chapter 96	2. Examine the freewheel unit chip detector for accumulated material. Perform operational check of freewheel unit chip detector. (Refer to transmission chip detector caution system.)		
Chapter 65	3. Examine forward short shaft (steel) disc pack couplings for condition and security.		
	4. Examine forward short shaft (steel) splined adapters for adequate lubrication and freedom of movement.		
	5. Torque check forward short shaft disc pack coupling fasteners 50 to 70 inch-pounds (5.7 to 7.9 Nm). For 206L3+ IGW Upgrade helicopters, torque check forward short shaft disc pack coupling fasteners 150 to 180 inch-pounds (16.9 to 20.3 Nm).		
Chapter 96	<u>ELECTRICAL</u>		
	1. Examine all electrical components, wires, cables, and connectors in the power plant area for chafing, general condition, and security.		
	2. Verify illumination of airframe fuel filter caution light by depressing differential switch “press to test” button on filter head.		
	ZONE 5 — AFT TOP DECK		
	<u>PLACARDS AND MARKINGS</u>		
Chapter 11	1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter.		
	<u>AIRFRAME (AFT TOP DECK)</u>		
Chapter 71	1. Remove and examine aft fairing and attachment fasteners for condition and security.		

PROGRESSIVE INSPECTIONS

5-17. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 79	2. Examine fairing retainer for condition.		
	3. Examine exterior of aft deck structure for condition.		
	<u>OIL SYSTEM</u>		
	1. Examine oil cooler area for evidence of oil leaks. Examine oil cooler pan for cleanliness and make sure the drain is not blocked.		
	2. Examine all flexible and rigid fluid lines for condition and security.		
	a. Pay particular attention for chafing damage and kinked lines.		
	3. Examine oil cooler core for obstructions and cleanliness.		
	4. Examine oil cooler blower and housing for cleanliness, condition and security.		
Chapter 65			
Chapter 79	5. Examine oil tank for leakage, condition and security. Check oil for contamination.		
	6. Examine oil tank supports for condition and security.		
Chapter 71	7. Examine the oil cooler seals bonded inside the aft fairing for condition.		
	8. Examine external scavenge oil filter system (STC) (if installed) for condition and security.		
	<u>DRIVETRAIN</u>		
Chapter 65	1. Examine the blower impeller for condition.		
	2. Examine oil cooler blower impeller shaft for condition.		
	3. Examine oil cooler blower hanger bearings and brackets for grease leakage and evidence of overheating.		
	4. Examine aft short shaft (aluminium) for condition and security.		

5-17. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

PROGRESSIVE INSPECTIONS

5-18. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 6 — TAILBOOM <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>TAILBOOM STRUCTURE</u> NOTE In the event that cracks are found during inspection of tailboom, contact Bell Helicopter Textron, Product Support Engineering. 1. Examine tailbooms 206-033-004-045 and prior, modified in accordance with ASB 206L-87-47 as follows: a. Remove tail rotor driveshaft and gearbox fairings. Inspect for condition and attachment of fasteners. b. Remove a sufficient amount of anti-chafing tape to permit inspection of tailboom skin adjacent to tail rotor driveshaft cover retention clips aft of horizontal stabilizer, and in area of double row of rivets attaching tail rotor gearbox support fitting to tailboom (BS 174).		

Chapter 11

Chapter 53

PROGRESSIVE INSPECTIONS

5-18. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 53 BHT-206-SRM	c. Prior to cleaning, use a minimum 5X magnifying glass to inspect for cracks and signs of developing cracks at the following locations: (1) Aft of stabilizer assembly, around rivets, which attach tail rotor driveshaft cover retention clips to tailboom. (2) Area of tail rotor gearbox fairing attachment nutplate rivets. (3) Area of double row of rivets, which attach tail rotor gearbox support fitting to tailboom (BS 174). d. Clean entire tailboom taking particular care to remove all grime and dirt in specified area of inspection and perform inspection using minimum 5X magnifying glass. e. Examine entire tailboom for cracks, dents, deformation, waviness, working rivets, and chafing between tailboom skin and fairing. Pay particular attention to rivets attaching the tail rotor gearbox support to the tailboom. f. Replace any loose or working rivets found. g. Replace removed, damaged, or worn anti-chafing adhesive tape (C-460) as required. h. Inspect doubler and clip edge sealant for integrity. Reseal as required. i. As applicable to tailbooms modified in accordance with ASB 206L-99-115, examine doubler around stabilizer on left side for integrity of sealant. Reseal as required. 2. Inspect tailbooms P/N 206-033-004-143 and subsequent as follows: a. Remove tail rotor driveshaft and gearbox fairings. Inspect for condition and attachment of fasteners. b. Check anti-chafing adhesive tape (C-460) on tailboom for condition. Replace worn or damaged tape as required.		

PROGRESSIVE INSPECTIONS

5-18. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206-SRM	c. Inspect entire tailboom for cracks, dents, deformation, working rivets, and chafing between tailboom skin and fairing. Pay particular attention to rivets attaching the tail rotor gearbox support to the tailboom.		
	d. Replace any loose or working rivets found.		
	e. Inspect all clip edges for integrity of sealant. Reseal as required.		
	f. As applicable to tailbooms modified in accordance with ASB 206L-99-115, examine doubler around stabilizer on left side for integrity of sealant. Reseal as required.		
	3. Examine horizontal stabilizer for condition and security of attachment. Verify security of all attachment bolts.		
	4. Examine elevators for condition, security of attachment, and side play.		
	5. Examine auxiliary finlets for condition and security.		
	6. Inspect the vertical fin attachment support for condition and damage. Pay particular attention to the vertical fin attachment points.		
	7. Examine vertical fin assembly for condition and security.		
	8. Examine vertical fin and tail skid for condition, security, and signs of ground contact.		
Chapter 32	9. Examine for open tailboom drains on lower skin and clear any obstructions.		
	10. Examine antennas for damage and security.		
	<u>TAIL ROTOR DRIVESHAFTS</u>		
Chapter 65	1. Examine tail rotor driveshaft hanger bearings for excessive grease leakage and evidence of overheating.		
	2. Examine segmented driveshafts and aft splined adapter for condition and security. Check aft splined adapter for adequate lubrication and freedom of movement.		

PROGRESSIVE INSPECTIONS

5-18. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	3. Torque check disc pack coupling fasteners 50 to 70 inch-pounds (5.7 to 7.9 Nm). <u>TAIL ROTOR GEARBOX</u> Chapter 53 1. Examine tail rotor gearbox support for condition and security. Pay particular attention for cracks at the gearbox attachment holes. Chapter 65 2. Examine tail rotor gearbox for oil leaks, condition and security. 3. Examine gearbox oil for evidence of contamination. 4. Examine tail rotor output shaft for condition. Chapter 65 5. Examine the tail rotor gearbox chip detector for accumulated material. Chapter 96 6. Perform operational check of the tail rotor gearbox chip detector. Chapter 64 <u>TAIL ROTOR PITCH CHANGE CONTROLS</u> 1. Examine the tail rotor pitch control mechanism for freedom of travel throughout range and for condition and security. 2. Examine the following tail rotor pitch change components: a. Boot for condition, security, and evidence of grease or oil leakage. b. Lower control mechanism rod for condition of bearings. c. Pitch links and spherical bearings for condition and security. d. Crosshead for condition and security. e. Knurled nut for condition and security and liner for excessive play.		

PROGRESSIVE INSPECTIONS

5-18. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96	<u>ELECTRICAL</u> 1. Examine all visible electrical components, wires, cables, and connectors in the area of the tailboom for chafing, and general condition and security. 2. Verify navigation lights and anti-collision light for operation, condition, and security.		
Chapter 97	3. Examine antennas for condition and security. <u>GROUND RUN</u>  CAUTION GROUND RUN OF HELICOPTER TO BE ACCOMPLISHED BY QUALIFIED PERSONNEL ONLY.		
Chapter 12	1. Make sure applicable servicing requirements have been carried out. 2. Check oil level of transmission, hydraulic tank, engine and rail rotor gearbox prior to running helicopter. 3. Make sure that helicopter is ready for ground run and that surrounding area is clear.		
BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade)	4. Start the helicopter and conduct ground run at 100% N_R to check for leaks and ensure all systems are operational and parameters are within Flight Manual limitations.		

PROGRESSIVE INSPECTIONS

5-19. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 11 BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade) Chapter 53 Chapter 25 IL GEN-05-103	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 7 — CABIN INTERIOR <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>INSTRUMENTS</u> 1. Examine instruments and instrument panel for condition, security and for correct markings. <u>EQUIPMENT AND FURNISHINGS</u> 1. Examine the cabin floor for condition. 2. Examine the seat assemblies for condition and security. 3. Examine passenger and crew restraints and webbing for condition and security. 4. Verify operation of passenger and crew inertia reels and belt buckles. Pull promptly on each reel to confirm the proper activation of the reel locking mechanism.		

PROGRESSIVE INSPECTIONS

5-19. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 52 Chapter 21 Chapter 95 Chapter 26 Chapter 21 Chapter 67 Chapter 96	5. Examine the interior trim for condition and security. 6. Verify sliding windows for safety and smoothness of sliding. 7. Examine the ventilation system for condition and security. 8. Verify nose vents for proper operation, absence of obstructions or debris, and open drains. 9. Verify for proper operation of the fuel valve switch guard. 10. Inspect cabin fire extinguisher for condition, security and proper charge. 11. Verify proper operation of ventilation inlet control cables. 12. Examine first aid kit, replace missing or out of date items.		
	<u>CONTROLS</u>		
	1. Examine the collective control stick for condition and security. Examine copilot collective control stick if installed.		
	2. Examine the cyclic control stick for condition and security. Examine copilot cyclic control stick if installed.		
	3. Examine the anti-torque control pedals for condition and security. Examine copilot anti-torque control pedals if installed.		
	<u>ELECTRICAL</u>		
	1. Verify operation of cockpit map reading light.		
	2. Verify operation of aft cabin reading lights (if installed).		
			
	USE EXTREME CARE WHEN IN PROXIMITY OF PITOT TUBE WITH HEAT APPLIED, TOUCHING TUBE MAY RESULT IN SERIOUS BURNS.		

PROGRESSIVE INSPECTIONS

5-19. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	3. Verify operation of the pitot tube heating system. 4. Verify operation of defog blowers. 5. Verify operation of ENGINE OUT and LOW ROTOR RPM audio and mute switch (if installed). 6. Verify illumination of all caution panel annunciator light segments by depressing test switch, or each individual light segment, as applicable. 7. Verify instrument lighting and dimming capabilities. ZONE 8 — FORWARD FUSELAGE <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>FUSELAGE</u> 1. Examine forward fuselage for condition. 2. Examine all cabin doors for condition and security. Give special attention to the following a. Hinges b. Seals c. Latches for proper adjustment, positive locking, and wear d. Windows e. Handles 3. Drain moisture from pitot and static piping installation. 4. Examine the external power door and receptacle for condition and security.		
Chapter 11			
Chapter 53			
Chapter 52			
Chapter 95			
Chapter 53			

PROGRESSIVE INSPECTIONS

5-19. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 52 Chapter 32 Chapter 52 Chapter 53 Chapter 96 and Chapter 97	5. Examine battery compartment door, door seal and attachment for condition and security. 6. Examine components in battery compartment for condition and security. 7. Examine cabin entry steps (if installed) for condition and security. 8. Examine windshields and skylights for condition. 9. Examine upper fuselage for evidence of water leaks. 10. Examine lower fuselage for indication of fuel leaks, dents, cracks, corrosion, delamination, loose or missing rivets, and condition. 11. Inspect external area of fuel boost pump for interference of wire from low fuel warning switch to fuel boost pump retainer. 12. Examine all fuselage sealant joints for condition. Restore sealant as necessary. <u>ELECTRICAL AND AVIONICS</u> 1. Examine all visible electrical components, wires, cables, and connectors in the area of the forward fuselage for chafing, and general condition and security. 2. Examine battery and vent tubes for condition and security. 3. Perform operational test of the battery temperature indicating system. 4. Verify operation of litter door open warning light. 5. Verify operation of landing lights. 6. Verify operation of lower fuselage mounted position lights (if installed). 7. Examine antennas for condition and security.		

PROGRESSIVE INSPECTIONS

5-19. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	ZONE 9 — AFT FUSELAGE		
	<u>PLACARDS AND MARKINGS</u>		
Chapter 11	1. Examine the placards, decals and markings. Make sure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter.		
	<u>FUSELAGE (EXTERIOR)</u>		
Chapter 53	1. Examine aft fuselage for dents, cracks, corrosion, delamination, loose or missing rivets and condition.		
	2. Examine aft fuselage for indications of fuel or oil leaks.		
Chapter 28	3. Examine the fuel cap for condition and security.		
Chapter 96	4. Examine the grounding plug for condition.		
Chapter 6 and Chapter 53	5. Examine all fuselage drains for condition and freedom from obstructions.		
Applicable Service Instruction	6. Examine heater and/or air conditioning inlets and outlets for cleanliness and absence of obstructions, (if installed).		
Chapter 53	7. Examine baggage compartment door, seal, and latches for operation, condition, and security.		
Chapter 96	8. Verify operation of the baggage door ajar caution light, (if installed).		
	<u>FUSELAGE (INTERIOR)</u>		
Chapter 53	1. Examine baggage compartment for condition.		
	2. Gain access to inside of aft fuselage through access panels in baggage compartment and access panel located on the aft right hand fuselage:		
	a. Examine access panels and fasteners for condition.		
	b. Examine under engine pan for fuel, oil or water leaks.		

5-19. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

5-00-00
Page 44 Rev. 16 25 FEB 2011 ECCN EAR99

PROGRESSIVE INSPECTIONS

5-19. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	3. Examine all optional equipment installed in the aft fuselage area for condition and security. 4. Verify proper operation of fuel sump drain valve switch. ZONE 10 — LANDING GEAR <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>CROSSTUBES</u> 1. Examine crosstube retaining straps, cushions, and attaching hardware for condition and security. 2. Examine fuselage attachment fittings for condition and security. 3. Examine electrical bonding strips (if installed) for condition and security. 4. Examine fairings (if installed) for condition and security. 5. Examine crosstube riveted or clamped supports for condition and security. Give particular attention to the sealant joints around supports. Restore sealant (C-251) and paint finish as required. 6. Examine crosstubes for corrosion and damage. Give particular attention to areas where equipment is mounted. Repair and/or restore surface protection as required. 7. Examine cabin entry steps for condition and security (if installed). 8. Examine sealant joint at junction with skid tube saddles. Restore sealant (C-251) and paint finish as required. <u>SKID TUBES</u> 1. Examine skid tubes for corrosion, damage, and security.		

Chapter 11

Chapter 32

Chapter 32

PROGRESSIVE INSPECTIONS

5-19. 100-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 12 BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade) Chapter 96	2. Examine skid shoes for condition and security. 3. Examine skid tube saddles for corrosion, damage, and security. 4. Examine ground handling wheel attachment bolts for condition and security. <u>GROUND RUN</u>  CAUTION GROUND RUN OF HELICOPTER TO BE ACCOMPLISHED BY QUALIFIED PERSONNEL ONLY.		
	1. Make sure applicable servicing requirements have been carried out. 2. Check oil level of transmission, hydraulic tank, engine and rail rotor gearbox prior to running helicopter. 3. Make sure that helicopter is ready for ground run and that surrounding area is clear. 4. Start the helicopter and conduct ground run at 100% N_R to check for leaks and ensure all systems are operational and parameters are within Flight Manual limitations. 5. Check the voltage regulator setting.		

PERIODIC INSPECTION

5-20. 100-HOUR AIRFRAME PERIODIC INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MUCH	OTHER
Chapter 5 Paragraph 5-16 through paragraph 5-19	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	- Do this inspection every 100 hours of operation or every 12 calendar months. - Do all four events of the 100-hour progressive inspection.		

PROGRESSIVE INSPECTIONS

5-21. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 1 — MAIN ROTOR SYSTEM <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Make sure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>MAIN ROTOR SYSTEM</u> 1. Verify main rotor flap restraint for freedom of movement, and for condition and security. 2. Examine static stops and mast for evidence of mast bumping. 3. Remove main rotor blade leading edge erosion protection tape, if installed. 4. Examine main rotor blades for cleanliness and overall condition. Examine for cracks, corrosion and de-bonding of doublers. 5. Examine leading edge of blades for corrosion and erosion. Restore contour as necessary. 6. Examine the tip weight cap for corrosion, cracks, erosion, and deformation.		

Chapter 11

Chapter 62

PROGRESSIVE INSPECTIONS

5-21. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	7. If applicable, reinstall main rotor blade leading edge erosion protection tape. 8. Examine the following main rotor hub assembly components for condition and security: a. Mast nut b. Trunnion c. Pillow blocks d. Grips e. Pitch horns f. Static stops 9. Examine pitch horn trunnion bearings for evidence of wear, damage, and for security. 10. Examine main rotor yoke for corrosion or mechanical damage as follows: a. Examine fillet radius of both yoke spindles inboard of wear sleeves for evidence of corrosion. If corrosion is visible, remove with fine abrasive pad (C-407). If corrosion cannot be removed with pads, or is extensive, disassemble hub for inspection and repair. NOTE If the main rotor hub must be disassembled, omit remaining steps. b. Examine entire yoke centre section (inboard and outboard surfaces) for damage. c. Touch up all repaired areas or areas of bare metal in accordance with applicable main rotor hub inspection and repair instructions.		

PROGRESSIVE INSPECTIONS

5-21. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	d. Ensure no sealant voids are visible around shields or wear sleeve, strap fittings, and grip closure. Recoat with sealant (C-308) as required. On main rotor hub assemblies up to and including P/N 206-011-100-025, coat the remaining exposed fillet radius and repaired surfaces with a film of corrosion preventive compound (C-101). ZONE 2 — TAIL ROTOR ASSEMBLY <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Make sure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>TAIL ROTOR ASSEMBLY</u> 1. Clean tail rotor blades to maintain visibility of warning stripes. 2. Examine the following tail rotor hub assembly components for condition and security of attachment: a. Yoke b. Pitch horns c. Trunnion and trunnion caps d. Counterweight hardware 3. Examine tail rotor blades as follows: a. Tip block rivets for damage, corrosion, erosion, and looseness. b. Skin for bulges, nicks, dents, scratches, or other damage. c. Deformed or cracked skin in the area of the chordwise weights. d. Leading edge for erosion, nicks, dents or scratches.		
Chapter 11			
Chapter 64			
BHT-206L-CR&O			
Chapter 64			

PROGRESSIVE INSPECTIONS

5-21. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 12	e. Bonded joints of blade skin mating area for suspected voids or cracks. Pay particular attention in the area of tip block and doublers. f. Feathering bearings for looseness and cracks in uniball. 4. Examine the following tail rotor hub and blade assembly attaching components for condition and security: a. Spacer b. Rubber bumper c. Static stop d. Nut e. Balance wheel 5. Check dynamic balance of tail rotor hub and blade assembly and adjust as required during ground run. <u>GROUND RUN</u>  GROUND RUN OF HELICOPTER TO BE ACCOMPLISHED BY QUALIFIED PERSONNEL ONLY. 1. Make sure applicable servicing requirements have been carried out. 2. Check oil level of transmission, hydraulic tank, engine and tail rotor gearbox prior to running helicopter. 3. Make sure that helicopter is ready for ground run and that surrounding area is clear.		

PROGRESSIVE INSPECTIONS

5-21. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 1 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade)	4. Start the helicopter and conduct ground run at 100% N_R to check for leaks and ensure all systems are operational and parameters are within Flight Manual limitations.		

5-22. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 3 — FORWARD DECK <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Make sure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>AIRFRAME (FORWARD DECK)</u> 1. Open and examine forward fairing for condition and security. 2. Remove and examine transmission cowling for condition. 3. Examine all fairing and cowling latches and/or fasteners for condition. 4. Examine top deck for condition, leaks and security. 5. Clean transmission deck. 6. Examine air indication cowling and plenum for damage, obstructions and cleanliness. Examine intake fairing windows for damage and cleanliness. 7. Examine inlet screen (if applicable) for missing or damaged wires and rivets.		
Chapter 11			
Chapter 71			
Chapter 53			

PROGRESSIVE INSPECTIONS

5-22. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 67	8. Examine particle separator (if applicable) vortex tubes, ejector tubes, and ejector nozzles for cleanliness, condition, and security. 9. Examine forward deck drain(s) to ensure absence of obstruction. 10. Examine antennas for condition and security. <u>CONTROLS</u> 1. Examine the following flight control components for signs of interference, corrosion, wear, mechanical damage and security: a. Control tubes. b. Links. c. Rod and bearings. d. Bellcranks. e. Bellcrank supports. f. Attaching bolts and nuts.		
	2. Inspect main rotor pitch links with a 3X magnifying glass for damage, corrosion and cracks. Give particular attention to swaged ends at jam nut or inserts. 3. Examine N₂ control linkages on forward deck for condition and security. Pay particular attention to the jackshaft assembly for damage or evidence of twisting. 4. Verify all control tubes and bellcranks for freedom of travel throughout range.		
	<u>SWASHPLATE ASSEMBLY AND MAST</u> 1. Clean swashplate assembly and mast. 2. Disconnect main rotor pitch links from outer ring.		

PROGRESSIVE INSPECTIONS

5-22. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	3. Disconnect idler (drive) link from outer ring. 4. Examine swashplate drive assembly for axial, radial, and accumulative wear. 5. Disconnect boot from swashplate outer ring and lift up temporarily. Examine boot for evidence of deterioration. 6. Verify condition of duplex bearing, before lubrication, as follows: a. Rotate outer ring to check duplex bearing for condition. Bearing must be smooth and show no evidence of roughness, binding, dragging, or looseness. 7. Examine pivot sleeve slot sidewalls for wear or deterioration. 8. Examine pivot sleeve bearings for wear, deterioration and evidence of excessive axial play between pivot sleeve and swashplate support. 9. Examine collar set bushings for cracks and damage. 10. Examine swashplate support and uniball surfaces for condition. 11. Examine collective lever to sleeve assembly pins and bushings for condition. 12. Examine inner ring for condition. Examine for evidence of contact with sleeve assembly. 13. Examine outer ring for condition. 14. Examine the upper inside diameter of swashplate support for evidence of contact with the mast pole. 15. Verify and adjust swashplate tilt friction as required. a. Value must be between 15 to 32 pounds (67 to 142 N). If out of limits, adjust to 15 to 32 pounds (67 to 142 N) and check again.		

PROGRESSIVE INSPECTIONS

5-22. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 62	16. Connect and secure boot, idler (drive) link and main rotor pitch links to outer ring.		
	17. Examine swashplate assembly for condition and security.		
	18. Examine mast for condition.		
	19. Ensure no sealant voids are visible around the swashplate drive collar set. Re-coat with adhesive (C-307) as required.		
Chapter 29	<u>HYDRAULIC SYSTEM</u>		
Chapter 12	1. Examine rigid and flexible fluid lines for chafing, leaks and security.		
	2. Examine hydraulic pump for leaks and general condition.		
	3. Examine hydraulic pump shaft splines, rotor tachometer splines, and oil pump splines for excessive wear.		
	4. Lubricate hydraulic pump shaft splines and rotor tachometer splines.		
	5. Examine hydraulic reservoir for leaks and general condition.		
	6. Examine servo actuators for leaks, condition and security.		
	7. Examine servo actuator support for condition.		
Chapter 67	8. Verify linkage pivot bolts on hydraulic servo actuators for freedom of rotation and security.		
Chapter 12	9. Examine hydraulic filter red indicator button (two locations). Button should not be extended.		
	10. Verify fluid level in hydraulic tank. Replenish as required. Replace fluid if color has changed color or if fluid emits bad odor.		
	11. Examine manifold, relief valve, and solenoid valve for leaks, condition and security.		

PROGRESSIVE INSPECTIONS

5-22. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 63	<u>TRANSMISSION AND PYLON ASSEMBLY</u> 1. Examine the following pylon support components: a. Transmission link assemblies and bearings for damage and deterioration. b. Nodal beam flexures for condition and security. c. Forward and aft nodal beam deck supports for condition and security. d. Nodal beam stops for evidence of excessive contact with nodal beam arms. e. Transmission restraint for damage and spherical bearings for excessive wear and security. f. Stop mount for condition and security. Stop mount bushings for wear. g. All pylon support elastomeric components for evidence of deterioration. h. All pylon support hardware for security of attachment. 2. Examine transmission assembly for condition and security. 3. Examine transmission assembly for evidence of oil leakage. 4. Examine all fluid lines for chafing, damage and evidence of leakage. 5. Examine transmission oil for evidence of contamination. 6. Examine transmission oil filter bypass indicator for condition. Bypass button should not be extended. 7. Inspect all transmission chip detectors for accumulated material.		
Chapter 96	8. Perform functional test of all transmission chip detectors.		

5-22. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

5-00-00
Page 60 Rev. 16 25 FEB 2011 ECCN EAR99

PROGRESSIVE INSPECTIONS

5-22. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 2 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 12 BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade)	<u>GROUND RUN</u> CAUTION GROUND RUN OF HELICOPTER TO BE ACCOMPLISHED BY QUALIFIED PERSONNEL ONLY. 1. Make sure applicable servicing requirements have been carried out. 2. Check oil level of transmission, hydraulic tank, engine and rail rotor gearbox prior to running helicopter. 3. Make sure that helicopter is ready for ground run and that surrounding area is clear. 4. Start the helicopter and conduct ground run at 100% N_R to check for leaks and ensure all systems are operational and parameters are within Flight Manual limitations.		

PROGRESSIVE INSPECTIONS

5-23. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 4 — POWER PLANT <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>AIRFRAME (POWER PLANT AREA)</u> 1. Examine firewalls for condition and security. 2. Examine engine cowlings and doors for condition and security. Using a bright light and mirror, inspect exposed upper and lower edges of the joints between aluminium longerons and titanium engine pan. Edge of sealant coating should be visible. No indications of corrosion or cracks are acceptable. 3. Examine engine pan area for evidence of loose fasteners and damage. Restore cracked or missing sealant form engine pan. 4. Examine engine pan drains. Make sure that they are not clogged. 5. Examine airframe fuel filter assembly for evidence of leakage and security.		

Chapter 11

Chapter 71

Chapter 53

Chapter 28

PROGRESSIVE INSPECTIONS

5-23. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 71	6. Examine engine mount legs for condition and security. Pay particular attention for loose fasteners.		
	7. Examine engine mount fittings for condition and security.		
Applicable Service Instruction	8. Examine rotor brake (if installed) for condition and security.		
Chapter 96	9. Examine the primary electrical ground connection in engine pan area for condition and security		
	<u>POWER PLANT</u>		
Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2	1. Perform engine inspection per the applicable Rolls-Royce Operation and Maintenance Manual.		
Chapter 71	2. Examine engine inlet bellmouth for obstruction and general condition.		
	3. Examine engine compartment hardware for security of attachment.		
	4. Examine engine for evidence of fuel or oil leaks.		
	5. Examine all flexible and rigid lines for condition and security.		
	a. Pay particular attention for chafing damage and kinked lines.		
	6. Examine exhaust stack for condition and security.		
	7. Examine all engine-mounted accessories for condition and security.		
Chapter 75	8. Examine the engine anti-ice solenoid valve for condition and security.		
Chapter 76	9. Inspect fuel control lever bolt hole and bolt for wear. Replace parts as required.		
Chapter 71	10. Inspect engine chip detectors for accumulated material.		

PROGRESSIVE INSPECTIONS

5-23. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96	11. Perform operational check of all engine chip detectors.		
Chapter 95	12. Perform operational check of turbine outlet temperature system.		
Chapter 76	13. Examine engine controls for condition and security.		
	14. Verify operation of engine N_1 control as follows:		
	a. Ensure proper throttle friction.		
	b. Check freedom of full throttle grip travel and idle release operation. Return to closed position. Check copilot throttle if installed.		
	c. Ensure fuel control stop lever contact with minimum and maximum stops before throttle grip reaches travel limit.		
	NOTE		
	If dual controls are installed, it is permissible for pointer to be 0.078 inch (1.98 mm) below 40° mark when copilot twist grip is used.		
	d. Rotate throttle grip to idle detent, fuel control pointer should be no more than 0.01 inch (0.25 mm) below the 40° mark on the quadrant.		
	e. Verify control linkage for excessive looseness, lost motion, and binding.		
	15. Verify operation of engine N_2 control as follows:		
	a. Position N_2 governor actuator to full DECREASE (extended).		
	b. Lift collective stick full up.		
	c. Position N_2 governor actuator to full INCREASE (retracted).		
	d. Verify for clearance between governor stop and lever stop arm.		

PROGRESSIVE INSPECTIONS

5-23. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 71 Chapter 71 Chapter 12	e. Lower collective stick full down. f. Position N₂ governor actuator to full DECREASE (extended). g. Verify for clearance between governor stop and lever stop arm. h. Verify control linkage for excessive looseness, lost motion, and binding.		
	16. Examine N₁ and N₂ tachometer generator shaft splines and gearbox adapter splines for condition. Clean and lubricate shaft splines. <u>FUEL SYSTEM</u>		
	1. Inspect airframe fuel filter head as follows: NOTE The following step does not apply to helicopters equipped with fuel filter assembly 222-366-621-103. a. Remove outlet port fitting from filter head. b. Pass a 0.020 inch (0.50 mm) wire through the bleed hole in outlet port side of filter head to ensure hole is not obstructed.		
	2. Replace airframe fuel filter element. 3. Purge airframe and engine fuel system as follows: a. Turn both fuel boost pumps ON. b. Depress airframe fuel filter bypass valve “press to test” button on fuel filter head until there is no evidence of air coming out the lower fuel filter drain port and out of the fuel filter outlet supply line.		

PROGRESSIVE INSPECTIONS

5-23. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2	c. Then proceed with Rolls-Royce engine fuel system purging procedure. 4. Ensure air is purged from fuel filter head and check for fuel leaks during ground run. <u>STARTER GENERATOR</u> 1. Remove starter generator. Examine mounting pad and clamp for condition. 2. Examine commutator for wear. Replace starter generator if not smooth and bright or if showing excessive wear. 3. Inspect brushes for wear. 4. Examine cooling duct and retention clamp for condition and security. 5. Examine the splines on starter generator shaft and engine gear shaft. <u>DRIVETRAIN</u> 1. Examine freewheel assembly for condition leaks and security. 2. Examine the freewheel unit chip detector for accumulated material. Perform operational check of freewheel unit chip detector. (Refer to transmission chip detector caution system.) 3. Examine forward short shaft (steel) disc pack couplings for condition and security. 4. Examine forward short shaft (steel) splined adapters for wear. 5. Lubricate forward short shaft (steel) splined adapters.		
Chapter 71			
Chapter 96			
Chapter 71			
Chapter 63			
Chapter 63 Chapter 96			
Chapter 65			
Chapter 12			

PROGRESSIVE INSPECTIONS

5-23. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 3 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 65	6. Torque check forward short shaft disc pack coupling fasteners 50 to 70 inch-pounds (5.7 to 7.9 Nm). For 206L3+ IGW Upgrade helicopters, torque check forward short shaft disc pack coupling fasteners 150 to 180 inch-pounds (16.9 to 20.3 Nm).		
Chapter 96	<u>ELECTRICAL</u> 1. Examine all electrical components, wires, cables, and connectors in the power plant area for chafing, general condition, and security. 2. Verify illumination of airframe fuel filter caution light by depressing differential switch “press to test” button on filter head. <u>GROUND RUN</u>  CAUTION GROUND RUN OF HELICOPTER TO BE ACCOMPLISHED BY QUALIFIED PERSONNEL ONLY.		
Chapter 12	1. Make sure applicable servicing requirements have been carried out. 2. Check oil level of transmission, hydraulic tank, engine and rail rotor gearbox prior to running helicopter. 3. Make sure that helicopter is ready for ground run and that surrounding area is clear.		
BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade)	4. Start the helicopter and conduct ground run at 100% N_R for a minimum of 2 minutes to check for leaks and ensure all systems are operational and parameters are within Flight Manual limitations.		

PROGRESSIVE INSPECTIONS

5-24. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 5 — AFT TOP DECK <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>AIRFRAME (AFT TOP DECK)</u> 1. Remove and examine aft fairing and attachment fasteners for condition and security. 2. Examine fairing retainer for condition. 3. Examine exterior of aft deck structure for condition. <u>OIL SYSTEM</u> 1. Examine oil cooler area for evidence of oil leaks. Examine oil cooler pan for cleanliness and make sure the drain is not blocked. 2. Examine all flexible and rigid fluid lines for condition and security. a. Pay particular attention for chafing damage and kinked lines.		

Chapter 11

Chapter 71

Chapter 79

PROGRESSIVE INSPECTIONS

5-24. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 65 Chapter 79 Chapter 71	3. Examine oil cooler core for obstructions and cleanliness. 4. Examine oil cooler blower and housing for cleanliness, condition and security. 5. Examine oil tank for leakage, condition and security. Check oil for contamination. 6. Examine oil tank supports for condition and security. 7. Examine the oil cooler seals bonded inside the aft fairing for condition. 8. Examine external scavenge oil filter system (STC) (if installed) for condition and security.		
	<u>DRIVETRAIN</u>		
	1. Examine the blower impeller for condition.		
	2. Using dye penetrant methods, inspect oil cooler blower impeller 206-061-432-031 for cracks. Give particular attention to the mounting flange where individual blades attach.		
	3. Examine oil cooler blower impeller shaft for condition.		
Chapter 65 BHT-ALL-SPM, Chapter 6	4. Examine oil cooler blower hanger bearings and brackets for grease leakage and evidence of overheating.		
	5. Lubricate oil cooler blower hanger bearings.		
	6. Examine aft short shaft (aluminium) for condition and security.		
Chapter 12 Chapter 65	7. Examine aft short shaft (aluminium) splined adapter for wear.		
	8. Lubricate aft short shaft (aluminum) splined adapter.		
Chapter 12 Chapter 65	9. Torque check disc pack coupling fasteners 50 to 70 inch-pounds (5.7 to 7.9 Nm).		

PROGRESSIVE INSPECTIONS

5-24. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96	<u>ELECTRICAL</u> 1. Examine all electrical components, wires, cables, and connectors in the area of the aft deck for chafing, and general condition and security. ZONE 6 — TAILBOOM		
Chapter 11	<u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>TAILBOOM STRUCTURE</u>		
Chapter 53	1. Remove and examine tail rotor driveshaft cover, and fasteners for condition and security. 2. Remove and examine tail rotor gearbox fairings for condition. 3. Examine anti-chafing adhesive tape (C-460) on tailboom for condition. Replace worn or damaged tape as required. NOTE In the event that cracks are found, contact Bell Helicopter Textron, Product Support Engineering. 4. Examine entire tailboom for the following conditions: a. Dents. NOTE Pay particular attention to the upper left side tailboom quadrant. b. Cracks. c. Deformation.		

5-24. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

5-00-00
Page 72 Rev. 16 25 FEB 2011 ECCN EAR99

PROGRESSIVE INSPECTIONS

5-24. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 12	2. Lubricate tail rotor driveshaft hanger bearings.		
	3. Examine and lubricate the aft tail rotor driveshaft splined adapter.		
Chapter 65	4. Examine segmented driveshafts and aft splined adapter for condition and security. Check splined adapters for adequate lubrication and freedom of movement.		
	5. Torque check disc pack coupling fasteners 50 to 70 inch-pounds (5.7 to 7.9 Nm).		
	<u>TAIL ROTOR GEARBOX</u>		
Chapter 53	1. Examine tail rotor gearbox support for condition and security. Pay particular attention for cracks at the gearbox attachment holes.		
Chapter 65	2. Examine tail rotor gearbox for oil leaks, condition and security.		
	3. Examine gearbox oil for evidence of contamination.		
	4. Examine tail rotor output shaft for condition.		
	5. Torque check tail rotor gearbox retaining nuts 50 to 70 inch-pounds (5.6 to 7.9 Nm).		
	6. Examine the tail rotor gearbox chip detector for accumulated material.		
Chapter 96	7. Perform operational check of the tail rotor gearbox chip detector.		
Chapter 64	<u>TAIL ROTOR PITCH CHANGE CONTROLS</u>		
	1. Examine the tail rotor pitch control mechanism for freedom of travel throughout range and for condition and security.		
	2. Examine the following tail rotor pitch change components:		
	a. Boot for condition, security, and evidence of grease or oil leakage.		

5-24. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 4 (CONT)

5-00-00
Page 74 Rev. 16 25 FEB 2011 ECCN EAR99

PROGRESSIVE INSPECTIONS

5-25. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 5

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 7 — CABIN INTERIOR <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>INSTRUMENTS</u> 1. Examine instruments and instrument panel for condition, security and for correct markings. <u>AIRFRAME</u> 1. Remove cabin overhead upholstery, hat bin, soundproofing blanket, aft vertical tunnel covers, and roll-over bulkhead access panels. 2. Remove roof beam access panels. 3. Examine flight control tubes inside roof beam for condition and security. 4. Examine roof beam and roof shell structure for condition.		
Chapter 11			
BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade)			
Chapter 25			
Chapter 53			
Chapter 67			
Chapter 53			

PROGRESSIVE INSPECTIONS

5-25. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 5 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96 Chapter 53	5. Examine aft passenger seat bulkhead for distortion and/or cracks and indication of screw contact in the area of hat bin attachment nutplates. 6. Examine electrical components behind hat bin for condition, security, and cleanliness. 7. Examine engine and transmission support structure for cracks, corrosion, or loose fasteners.		
	 EXERCISE CARE AND USE ADEQUATE SCREW LENGTH WHEN REINSTALLING VERTICAL TUNNEL COVER TO AVOID CONTACT WITH TAIL ROTOR CONTROL TUBE.		
	8. In the vertical tunnel area, examine the following: a. Flight control system tubes for evidence of chafing with oil line or flex cable. b. Flight control system bellcranks, levers, supports, and walking beams for binding, excessive looseness, and security of attachment. c. Oil lines for leakage, condition, and security. d. Roof beam interface with vertical tunnel for cracks, corrosion, and loose fasteners. e. Vertical tunnel stiffening angles at roof beam interface for cracks, condition, and loose fasteners.		
Chapter 25 and Chapter 53	9. Remove crew seat cushions and panels and examine the following: a. Control tubes, N₁ throttle cable, bellcranks, levers, yokes, and supports for bending, excessive looseness, and security of attachment.		
Chapter 67 and Chapter 76			

PROGRESSIVE INSPECTIONS

5-25. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 5 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Applicable Service Instruction	b. Heater ducts (if installed) for chafing with controls.		
Chapter 95	c. Oil lines for leakage and general condition.		
Chapter 96	d. Wiring and electrical components for condition and security.		
Chapter 53	e. Structure for corrosion, cracks, and condition.		
	<u>EQUIPMENT AND FURNISHINGS</u>		
Chapter 53	1. Examine the cabin floor for condition.		
Chapter 25	2. Examine the seat assemblies for condition and security.		
IL GEN-05-103	3. Examine passenger and crew restraints and webbing for condition and security.		
	4. Verify operation of passenger and crew inertia reels and belt buckles. Pull promptly on each reel to confirm the proper activation of the reel locking mechanism.		
	5. Examine the interior trim for condition and security.		
Chapter 52	6. Verify sliding windows for safety and smoothness of sliding.		
Chapter 21	7. Examine the ventilation system for condition and security.		
	8. Verify nose vents for proper operation, absence of obstructions or debris, and open drains.		
Chapter 95	9. Verify for proper operation of the fuel valve switch guard.		
Chapter 26	10. Inspect cabin fire extinguisher for condition, security and proper charge.		
Chapter 21	11. Verify proper operation of ventilation inlet control cables.		
	12. Examine first aid kit, replace missing or out of date items.		

PROGRESSIVE INSPECTIONS

5-25. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 5 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 67	<u>CONTROLS</u> 1. Examine the collective control stick for condition and security and minimum friction. Examine copilot collective control stick if installed. 2. Examine the cyclic control stick for condition and security and minimum friction. Examine copilot cyclic control stick if installed. 3. Examine the anti-torque control pedals for condition and security and minimum friction. Examine copilot anti-torque control pedals if installed.		
Chapter 96	<u>ELECTRICAL</u> 1. Verify operation of cockpit map reading light. 2. Verify operation of aft cabin reading lights (if installed). CAUTION USE EXTREME CARE WHEN IN PROXIMITY OF PITOT TUBE WITH HEAT APPLIED, TOUCHING TUBE MAY RESULT IN SERIOUS BURNS. 3. Verify operation of the pitot tube heating system. 4. Verify operation of defog blowers. 5. Verify operation of ENGINE OUT and LOW ROTOR RPM audio and mute switch (if installed). 6. Verify illumination of all caution panel annunciator light segments by depressing test switch, or each individual light segment, as applicable. 7. Verify instrument lighting and dimming capabilities.		

PROGRESSIVE INSPECTIONS

5-25. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 5 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	ZONE 8 — FORWARD FUSELAGE		
	<u>PLACARDS AND MARKINGS</u>		
Chapter 11	1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter.		
	<u>FUSELAGE</u>		
Chapter 53	1. Examine forward fuselage for condition.		
Chapter 52	2. Examine all cabin doors for condition and security. Give special attention to the following a. Hinges b. Seals c. Latches for proper adjustment, positive locking, and wear d. Windows e. Handles		
Chapter 95	3. Drain moisture from pitot and static piping installation.		
Chapter 53	4. Examine the external power door and receptacle for condition and security.		
	5. Examine battery compartment door, door seal and attachment for condition and security.		
Chapter 52	6. Examine components in battery compartment for condition and security.		
Chapter 32	7. Examine cabin entry steps (if installed) for condition and security.		
Chapter 52	8. Examine windshields and skylights for condition.		
Chapter 53	9. Examine upper fuselage for evidence of water leaks.		

PROGRESSIVE INSPECTIONS

5-25. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 5 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96 and Chapter 97	10. Examine lower fuselage for indication of fuel leaks, dents, cracks, corrosion, delamination, loose or missing rivets, and condition. 11. Inspect external area of fuel boost pump for interference of wire from low fuel warning switch to fuel boost pump retainer. 12. Examine all fuselage sealant joints for condition. Restore sealant as necessary. <u>ELECTRICAL AND AVIONICS</u> 1. Examine all visible electrical components, wires, cables, and connectors in the area of the forward fuselage for chafing, and general condition and security. 2. Remove battery and recondition in accordance with BHT-ALL-SPM and manufacturer's service manual. 3. Examine battery vent tubes for obstruction or damage. 4. Perform operational test of the battery temperature indicating system. 5. If battery was removed, clean mounting area prior to installing reconditioned battery. 6. Verify operation of litter door open warning light. 7. Verify operation of landing lights. 8. Verify operation of lower fuselage mounted position lights (if installed). 9. Examine antennas for condition and security.		

PROGRESSIVE INSPECTIONS

5-25. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 5 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 12 BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade) Chapter 96	<u>GROUND RUN</u>  CAUTION GROUND RUN OF HELICOPTER TO BE ACCOMPLISHED BY QUALIFIED PERSONNEL ONLY.		
	1. Make sure applicable servicing requirements have been carried out.		
	2. Check oil level of transmission, hydraulic tank, engine and rail rotor gearbox prior to running helicopter.		
	3. Make sure that helicopter is ready for ground run and that surrounding area is clear.		
	4. Start the helicopter and conduct ground run at 100% N_R to check for leaks and ensure all systems are operational and parameters are within Flight Manual limitations.		
	5. Check the voltage regulator setting. Adjust as required.		

PROGRESSIVE INSPECTIONS

5-26. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 6

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ ZONE 9 — AFT FUSELAGE <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Make sure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter. <u>FUSELAGE (EXTERIOR)</u> 1. Examine aft fuselage for dents, cracks, corrosion, delamination, loose or missing rivets and condition. 2. Examine aft fuselage for indications of fuel or oil leaks. 3. Examine the fuel cap for condition and security. 4. Examine the grounding plug for condition. 5. Examine all fuselage drains for condition and freedom from obstructions. 6. Examine heater and/or air conditioning inlets and outlets for cleanliness and absence of obstructions, (if installed). 7. Examine baggage compartment door, seal, and latches for operation, condition, and security.		
Chapter 11			
Chapter 53			
Chapter 28			
Chapter 96			
Chapter 6 and Chapter 53			
Applicable Service Instruction			
Chapter 53			

PROGRESSIVE INSPECTIONS

5-26. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 6 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96	8. Verify operation of the baggage door ajar caution light, (if installed).		
	<u>FUSELAGE (INTERIOR)</u>		
Chapter 53	1. Examine baggage compartment for condition.		
	2. Gain access to inside of aft fuselage through access panels in baggage compartment and access panel located on the aft right hand fuselage:		
	a. Examine access panels and fasteners for condition.		
	b. Examine under engine pan for fuel, oil or water leaks.		
	c. Examine drain lines for condition and security.		
	d. Examine interface between longerons and engine pan structure for cracks, corrosion, distortion and loose fasteners.		
	e. Inspect engine mount attachment structure for condition.		
	3. Remove fuel shutoff valve access panel.		
	a. Examine structure for cracks and corrosion.		
Chapter 28	b. Examine fuel system components for leaks and general condition.		
Chapter 96	c. Examine wires and connectors for condition.		
	<u>CONTROLS</u>		
Chapter 67	1. Examine the anti-torque control system components for condition and security.		
	2. Examine the stabilizer elevator control system components for condition and security.		

PROGRESSIVE INSPECTIONS

5-26. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 6 (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96 and Chapter 97	<u>ELECTRICAL AND AVIONICS</u> 1. Examine antennas for condition and security. 2. Examine all components, electrical wiring, cables, and connectors for chafing, general condition, and security. 3. Examine all optional equipment installed in the aft fuselage area for condition and security. 4. Verify proper operation of fuel sump drain valve switch.		
Chapter 11	ZONE 10 — LANDING GEAR <u>PLACARDS AND MARKINGS</u> 1. Examine the placards, decals and markings. Ensure they are readable, correctly applied and in agreement with the applicable configuration of your helicopter.		
Chapter 32	<u>CROSSTUBES</u> 1. Examine crosstube retaining straps, cushions, and attaching hardware for condition and security. 2. Examine fuselage attachment fittings for condition and security. 3. Examine electrical bonding strips (if installed) for condition and security. 4. Examine fairings (if installed) for condition and security. 5. Examine crosstube riveted or clamped supports for condition and security. Give particular attention to the sealant joints around supports. Restore sealant (C-251) and paint finish as required. 6. Examine crosstubes for corrosion and damage. Give particular attention to areas where equipment is mounted. Repair and/or restore surface protection as required.		

5-26. 300-HOUR AIRFRAME PROGRESSIVE INSPECTION — EVENT NO. 6 (CONT)

5-00-00
Page 86

PERIODIC INSPECTION

5-27. 300-HOUR AIRFRAME PERIODIC INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MUCH OTHER	
Chapter 5 Paragraph 5-21 through paragraph 5-26	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	1. Do this inspection every 300 hours of operation or every 12 calendar months. 2. Do all six events of the 300-hour progressive inspection.		

SCHEDULED INSPECTIONS

5-28. 100-HOUR INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ NOTE 100-hour inspection must be accomplished when using the 300-hour airframe progressive inspection program or the 300-hour airframe periodic inspection program. <u>MAIN ROTOR</u> 1. Torque check pillow block retention hardware 84 to 107 inch-pounds (9.4 to 12 Nm). Examine for misalignment of anti-slippage marks (ASB 206L-97-108). <u>TAILBOOM</u>  CAUTION ANY CRACK, CORROSION, OR LOOSE OR SHEARED RIVET IS CAUSE FOR IMMEDIATE GROUNDING OF THE HELICOPTER UNTIL THE PROBLEM IS CORRECTED. 2. Remove access panel on right side of aft fuselage.		

Chapter 62

Chapter 53

SCHEDULED INSPECTIONS

5-28. 100-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 4 and Chapter 53	3. Examine the four tailboom attachment fittings on fuselage aft bulkhead and tailboom forward bulkhead for cracks. Give special attention to the tailboom attachment fittings/intercostals and bolts, and to fasteners between the intercostal. Particular attention must be given to inspection of the upper left fitting (refer to Chapter 4, Inspection Limitations Schedule). 4. Make sure the area is clean and visually examine all visible sections of the upper left longeron between aft fuselage frame at STA 204.92 and frame at STA 231.486 for general condition, corrosion, and cracks. a. If corrosion or a defect is found, submit details to Product Support Engineering for evaluation and possible repair. NOTE In the event that cracks are found during inspection of tailboom, contact Bell Helicopter Textron, Product Support Engineering. 5. Examine tailbooms 206-033-004-045 and prior, modified in accordance with ASB 206L-87-47 as follows: a. Remove tail rotor driveshaft and gearbox fairings. Inspect for condition and attachment of fasteners. b. Remove a sufficient amount of anti-chafing tape to permit inspection of tailboom skin adjacent to tail rotor driveshaft cover retention clips aft of horizontal stabilizer, and in area of double row of rivets attaching tail rotor gearbox support fitting to tailboom (BS 174). c. Prior to cleaning, use a minimum 5X magnifying glass to inspect for cracks and signs of developing cracks at the following locations: (1) Aft of stabilizer assembly, around rivets, which attach tail rotor driveshaft cover retention clips to tailboom. (2) Area of tail rotor gearbox fairing attachment nutplate rivets.		

SCHEDULED INSPECTIONS

5-28. 100-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 53 BHT-206-SRM	(3) Area of double row of rivets, which attach tail rotor gearbox support fitting to tailboom (BS 174). d. Clean entire tailboom taking particular care to remove all grime and dirt in specified area of inspection and perform inspection using minimum 5X magnifying glass. e. Examine entire tailboom for cracks, dents, deformation, waviness, working rivets, and chafing between tailboom skin and fairing. Pay particular attention to rivets attaching the tail rotor gearbox support to the tailboom. f. Replace any loose or working rivets found. g. Replace removed, damaged, or worn anti-chafing adhesive tape (C-460) as required. h. Inspect doubler and clip edge sealant for integrity. Reseal as required. i. As applicable to tailbooms modified in accordance with ASB 206L-99-115, examine doubler around stabilizer on left side for integrity of sealant. Reseal as required. 6. Inspect tailbooms P/N 206-033-004-143 and subsequent as follows: a. Remove tail rotor driveshaft and gearbox fairings. Inspect for condition and attachment of fasteners. b. Check anti-chafing adhesive tape (C-460) on tailboom for condition. Replace worn or damaged tape as required. c. Inspect entire tailboom for cracks, dents, deformation, working rivets, and chafing between tailboom skin and fairing. Pay particular attention to rivets attaching the tail rotor gearbox support to the tailboom.		
BHT-206-SRM	d. Replace any loose or working rivets found. e. Inspect all clip edges for integrity of sealant. Reseal as required.		

SCHEDULED INSPECTIONS**5-28. 100-HOUR INSPECTION (CONT)**

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	f. As applicable to tailbooms modified in accordance with ASB 206L-99-115 , examine doubler around stabilizer on left side for integrity of sealant. Reseal as required.		

SCHEDULED INSPECTIONS

5-29. 300-HOUR INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	NOTE Every 300 hours of operation, the 300-hour inspection must be accomplished in conjunction with the 100-hour airframe progressive inspection program or the 100-hour airframe periodic inspection program.		
	FORWARD FUSELAGE		
	<u>CABIN INTERIOR</u>		
	1. Remove cabin overhead upholstery, hat bin, soundproofing blanket, aft vertical tunnel covers, and roll-over bulkhead access panels. 2. Remove roof beam access panels. 3. Examine flight control tubes inside roof beam for condition and security. 4. Examine roof beam and roof shell structure for condition. 5. Examine aft passenger seat bulkhead for distortion and/or cracks and indication of screw contact in the area of hat bin attachment nutplates.		

Chapter 25

Chapter 53

Chapter 67

Chapter 53

SCHEDULED INSPECTIONS

5-29. 300-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 96	6. Examine electrical components behind hat bin for condition, security, and cleanliness.		
Chapter 53	7. Examine engine and transmission support structure for cracks, corrosion, or loose fasteners.		
	 EXERCISE CARE AND USE ADEQUATE SCREW LENGTH WHEN REINSTALLING VERTICAL TUNNEL COVER TO AVOID CONTACT WITH TAIL ROTOR CONTROL TUBE.		
Chapter 67	8. In the vertical tunnel area, examine the following: a. Flight control system tubes for evidence of chafing with oil line or flex cable. b. Flight control system bellcranks, levers, supports, and walking beams for binding, excessive looseness, and security of attachment.		
Chapter 95	c. Oil lines for leakage, condition, and security.		
Chapter 53	d. Roof beam interface with vertical tunnel for cracks, corrosion, and loose fasteners.		
	e. Vertical tunnel stiffening angles at roof beam interface for cracks, condition, and loose fasteners.		
Chapter 25 and Chapter 53	9. Remove crew seat cushions and panels and examine the following:		
Chapter 67 and Chapter 76	a. Control tubes, N ₁ throttle cable, bellcranks, levers, yokes, and supports for bending, excessive looseness, and security of attachment.		
Applicable Service Instruction	b. Heater ducts (if installed) for chafing with controls.		
Chapter 95	c. Oil lines for leakage and general condition.		

SCHEDULED INSPECTIONS

5-29. 300-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96	d. Wiring and electrical components for condition and security.		
Chapter 53	e. Structure for corrosion, cracks, and condition.		
	<u>CONTROLS</u>		
Chapter 67	1. Verify minimum friction of collective control and readjust as required.		
	2. Verify minimum friction of cyclic control and readjust as required.		
	3. Verify minimum friction of control pedals and readjust as required.		
Chapter 96	<u>ELECTRICAL</u>		
	1. Remove battery and recondition in accordance with BHT-ALL-SPM and manufacturer's service manual.		
	<u>FUSELAGE</u>		
Chapter 52	1. Inspect latches on crew doors for correct adjustment.		
	2. Inspect latches on passenger doors, and baggage door for correct adjustment.		
	PYLON AREA		
	<u>SWASHPLATE ASSEMBLY</u>		
Chapter 62	1. Verify and adjust swashplate tilt friction as required.		
	2. Value must be between 15 to 32 pounds (67 to 142 N). If out of limits, adjust to 15 to 32 pounds (67 to 142 N) and check again.		

5-29. 300-HOUR INSPECTION (CONT)

5-00-00
Page 96 Rev. 16 25 FEB 2011 ECCN EAR99

SCHEDULED INSPECTIONS

5-29. 300-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 28 Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2 Chapter 71 Chapter 96 Chapter 71	2. Replace airframe fuel filter element. 3. Purge airframe and engine fuel system as follows: a. Turn both fuel boost pumps ON. b. Depress airframe fuel filter bypass valve "press to test" button on fuel filter head until there is no evidence of air coming out of the lower fuel filter drain port and out of the fuel filter outlet supply line. c. Then proceed with Rolls-Royce engine fuel system purging procedure. 4. Ensure air is purged from fuel filter head and check for fuel leaks during ground run. <u>STARTER GENERATOR</u> 1. Remove starter generator. Examine mounting pad and clamp for condition. 2. Examine commutator for wear. Replace starter generator if not smooth and bright or if showing excessive wear. 3. Inspect brushes for wear. 4. Examine cooling duct and retention clamp for condition and security. 5. Examine the splines on starter generator shaft and engine gear shaft. AFT FUSELAGE/TAILBOOM AREA <u>AFT FUSELAGE</u> 1. Visually inspect longeron and engine pan interface for corrosion as follows: a. Open access door in overhead baggage compartment.		

5-29. 300-HOUR INSPECTION (CONT)

5-00-00
Page 98 Rev. 16 25 FEB 2011 ECCN EAR99

SCHEDULED INSPECTIONS

5-29. 300-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 65	<u>TAIL ROTOR GEARBOX</u> Torque check tail rotor gearbox retaining nuts 50 to 70 inch-pounds (5.6 to 7.9 Nm). <u>TAIL ROTOR HUB AND BLADE ASSEMBLY</u>		
Chapter 64	1. Check dynamic balance of tail rotor hub and blade assembly. 2. Adjust as required.		

SCHEDULED INSPECTIONS

5-30. 1000-HOUR INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
ASB 206L-97-107	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>TAILBOOM</u> NOTE This inspection is to be complied with in accordance with Part 1 of ASB 206L-97-107 every 1000 hours of tailboom operation, except as follows: The inspection is not required for tailbooms P/N 206-033-004-143 and subsequent, or earlier tailbooms, which have been modified by TB 206L-96-191, TB 206L-05-220, or in accordance with BHT-206-SRM, Section 6-3-4, with upper tailboom skin P/N 206-033-004-155 or subsequent installed. 1. Complete eddy current inspection in accordance with Part 1 of ASB 206L-97-107.		

SCHEDULED INSPECTIONS

5-31. 1200-HOUR INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 67 Chapter 67 BHT-206L-CR&O BHT-206L-CR&O BHT-ALL-SPM	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ NOTE This inspection must be accomplished every 1200 flight hours. <u>CYCLIC CONTROL STICK</u> 1. Open right crew door to gain access to pilot cyclic control stick. Remove cyclic control stick. 2. Clean lower 4 inches of removed cyclic stick tube and inspect. 3. Visually inspect cyclic stick tube for cracks using a 3X magnifying glass. Pay particular attention to the area adjacent to the two slots in the tube where two bolts secure the tube when installed in the pivot lever assembly. 4. If a crack is suspected, remove paint and thoroughly inspect lower end of the cyclic stick tube for cracking using the fluorescent penetrant method. 5. If a crack is found, replace the cyclic stick tube with a serviceable tube.		

SCHEDULED INSPECTIONS

5-31. 1200-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-ALL-SPM BHT-ALL-SPM Chapter 67	6. If no crack is found, inspect cyclic stick tube for mechanical and corrosion damage as follows: a. Damaged and repaired areas must be separated by 1.0 inch (25 mm) minimum. b. Mechanical damage is not to exceed 0.005 inch (0.127 mm) depth and 1/3 tube circumference. c. Corrosion damage is not to exceed 0.0025 inch (0.0635 mm) depth before and 0.005 inch (0.127 mm) after repair and 1/3 tube circumference. d. Condemn as unserviceable a tube that does not meet these criteria. 7. Inspect bore of cyclic pivot lever assembly where stick tube is installed for mechanical and corrosion damage. Bore damage is not to exceed 0.002 inch (0.051 mm) for 1/4 of the circumference. Limit of one repair per bore. Repair or replace lever assembly as required. 8. For cyclic stick tubes considered serviceable, polish out any acceptable damage using 400 to 600 grit abrasive paper (C-423). 9. Thoroughly clean cyclic stick tube with water and mild detergent to completely remove residual penetrant and developer. Dry part completely.		
	10. Apply chemical film material (C-100) to bare metal area.		
	11. Touch up area with epoxy polyamide primer (C-204). Where finish paint coat is required, match to original finish using polyurethane coating (C-245).		
	12. Install cyclic control stick.		

SCHEDULED INSPECTIONS

5-31. 1200-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	<u>TAILBOOM</u> NOTE This inspection is to be complied with every 1200 hours of tailboom operation after compliance with ASB 206L-99-115, except as follows: The inspection is not required for tailbooms P/N 206-033-004-181/-199 and subsequent P/N 206-704-727-101 P/N 206-074-727-103 P/N 206-707-727-105 All tailbooms upgraded per PSE letter and reidentified as an equivalent of 206-033-004-199. 1. Prepare tailboom assembly for inspection by removing the following components: a. Auxiliary fin assembly. b. Slat assembly. c. Stabilizer and support. 2. Gain access to inside of tailboom from right side. Using a bright light, perform inspection of skin on inside surface of left side of tailboom for cracks. a. Inspect skin in area where doubler is attached. b. Inspect each rivet location for signs of loose or working rivets and for cracks that start at rivet holes. 3. Using a 10X magnifying glass, perform a visual inspection of external left side of tailboom at doubler and skin around doubler in the following areas: a. Inspect internal edge of doubler for cracks. b. Inspect support attachment holes for cracks. c. Inspect each rivet location for loose or working rivets and cracks that start from rivet holes.		

SCHEDULED INSPECTIONS

5-31. 1200-HOUR INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 67	d. Inspect edge of doubler for delamination between skin and doubler. e. Inspect tailboom skin area up to 1.00 inch (25.40 mm) area around doubler for cracks. 4. Using a 10X magnifying glass, perform a visual inspection of external right side of tailboom skin stabilizer cutout. a. Inspect edge of cutout for cracks in skin. b. Inspect support attachment holes for cracks in skin. 5. If a crack is detected in tailboom skin or doubler, contact Product Support Engineering as follows: <u>TAIL ROTOR CONTROL TUBE (WITH NYLATRON SLEEVES)</u> 1. Remove and inspect tail rotor control tube for wear and corrosion, and nylatron sleeve for debonding at five areas where tube contacts tailboom fairleads as follows: a. To gain access to control tube, remove tail rotor gearbox fairing and access panel on right side of aft fuselage adjacent to tailboom. b. Remove bolt at forward end of control tube. At the bellcrank, disconnect the small control rod coming from pitch change mechanism. Remove bolt attaching bellcrank to bracket. c. Pull control tube through aft end of tailboom with bellcrank attached. 2. Inspect tail rotor control tube and nylatron sleeves at five areas where tube contacts fairleads as follows: a. If nylatron sleeves show wear on one side only, but surface of control tube is unworn, tube may be rolled 180° and reinstalled.		

5-31. 1200-HOUR INSPECTION (CONT)

SCHEDULED INSPECTIONS

5-32. AS REQUIRED BY MANUFACTURER

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Rolls-Royce 250-C30 Series Operations and Maintenance Manual, 14W2	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>ENGINE</u> Perform engine inspection requirements.		

SCHEDULED INSPECTIONS

5-33. WEEKLY INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 62, Chapter 64	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	<u>MAIN ROTOR HUB AND BLADES, AND TAIL ROTOR HUB AND BLADES</u> — Preventive maintenance. NOTE The following procedures shall be accomplished as frequently as deemed necessary when operating in rain, corrosive salt laden air, or other adverse environmental conditions. The following preventive maintenance procedures for the main rotor hub and blades and tail rotor hub and blades are recommended to prevent corrosion and extend their life. The inspection may be accomplished more frequently or may be extended beyond the weekly interval, as deemed necessary, based on the actual operating environment. 1. Wipe hub and blades with drycleaning solvent (C-304). 2. Wash hub and blades with cleaning compound (C-318). Rinse with water and dry with clean cloths. 3. Inspect hub and blades for evidence of corrosion.		

SCHEDULED INSPECTIONS

5-33. WEEKLY INSPECTION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	NOTE Do not allow preservative oil (C-125) to contact tail rotor blade bearings. 4. Apply a light coat of preservative oil (C-125) to all hub and blade surfaces. Flood areas between main rotor hub grip tangs and blades, latch bolts to grips, and yoke fillet areas just inboard of pitch horn to ensure complete coverage.		

SCHEDULED INSPECTIONS

5-34. 12-MONTH INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 96 Chapter 28	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>GENERAL</u> 1. Ensure that a 100 or 300-hour airframe progressive inspection (all four or six events, as applicable) or the 100 or 300-hour airframe periodic inspection has been completed in the last 12 calendar month period. 2. Perform a dynamic balance of the main rotor hub and blade assembly. <u>FUEL SYSTEM</u> 3. Check operation of low fuel caution system. 4. Remove fuel boost pump assemblies and inspect fuel cell interiors for debris, water contamination, and fungus growth. 5. Remove, clean, and inspect fuel manifold assembly. 6. Remove, clean, and inspect inline fuel filters and check valves. <u>AIRFRAME</u> Remove overhead upholstery, hat bin, soundproofing blanket, and access panels. Inspect engine and transmission support structure for cracks and corrosion.		

SCHEDULED INSPECTIONS


5-35. 12 MONTHS OF COMPONENT OPERATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 62 BHT-206A/B/L-Series- CR&O	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	<u>MAIN ROTOR MAST</u> 1. Inspect mast assembly as follows: a. Remove mast nut, flap restraint kit, and cap plug. With the help of a bright light, inspect internal surface (internal diameter) of mast for corrosion and condition of protective coating. b. Install cap plug, flap restraint kit, and mast nut. 2. Check mast nut for torque after 1 to 5 hours of flight operation (TB 206L-07-223).		

SCHEDULED INSPECTIONS

5-36. 24-MONTH INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>MAIN ROTOR FLIGHT CONTROL BOLTS/NUTS</u> 1. Remove main rotor flight control bolts/nuts (1 through 14, Figure 5-2). 2. Clean bolts/nuts with MEK (C-309). Wipe dry. 3. Visually inspect bolts/nuts for corrosion and thread damage. Replace any bolts/nuts that have damaged threads, detectable wear and/or corrosion pitting. 4. Apply a coating of corrosion preventive compound (C-104) to all bolt shanks prior to installation. Do not apply corrosion preventive compound to bolt threads. 5. Install flight control bolts and attaching hardware. Torque nuts and install new cotter pins. 6. Apply a coating of corrosion preventive compound (C-101) to all bolt heads, washers, nuts, and exposed threads after installation. NOTE Operation in environmental conditions that erode corrosion preventive compound (C-101) may require periodic touch-up of corrosion preventive compound. Before touch-up, visually check exposed surfaces for evidence of corrosion. If corrosion is detected, accomplish step 1 through step 6.		

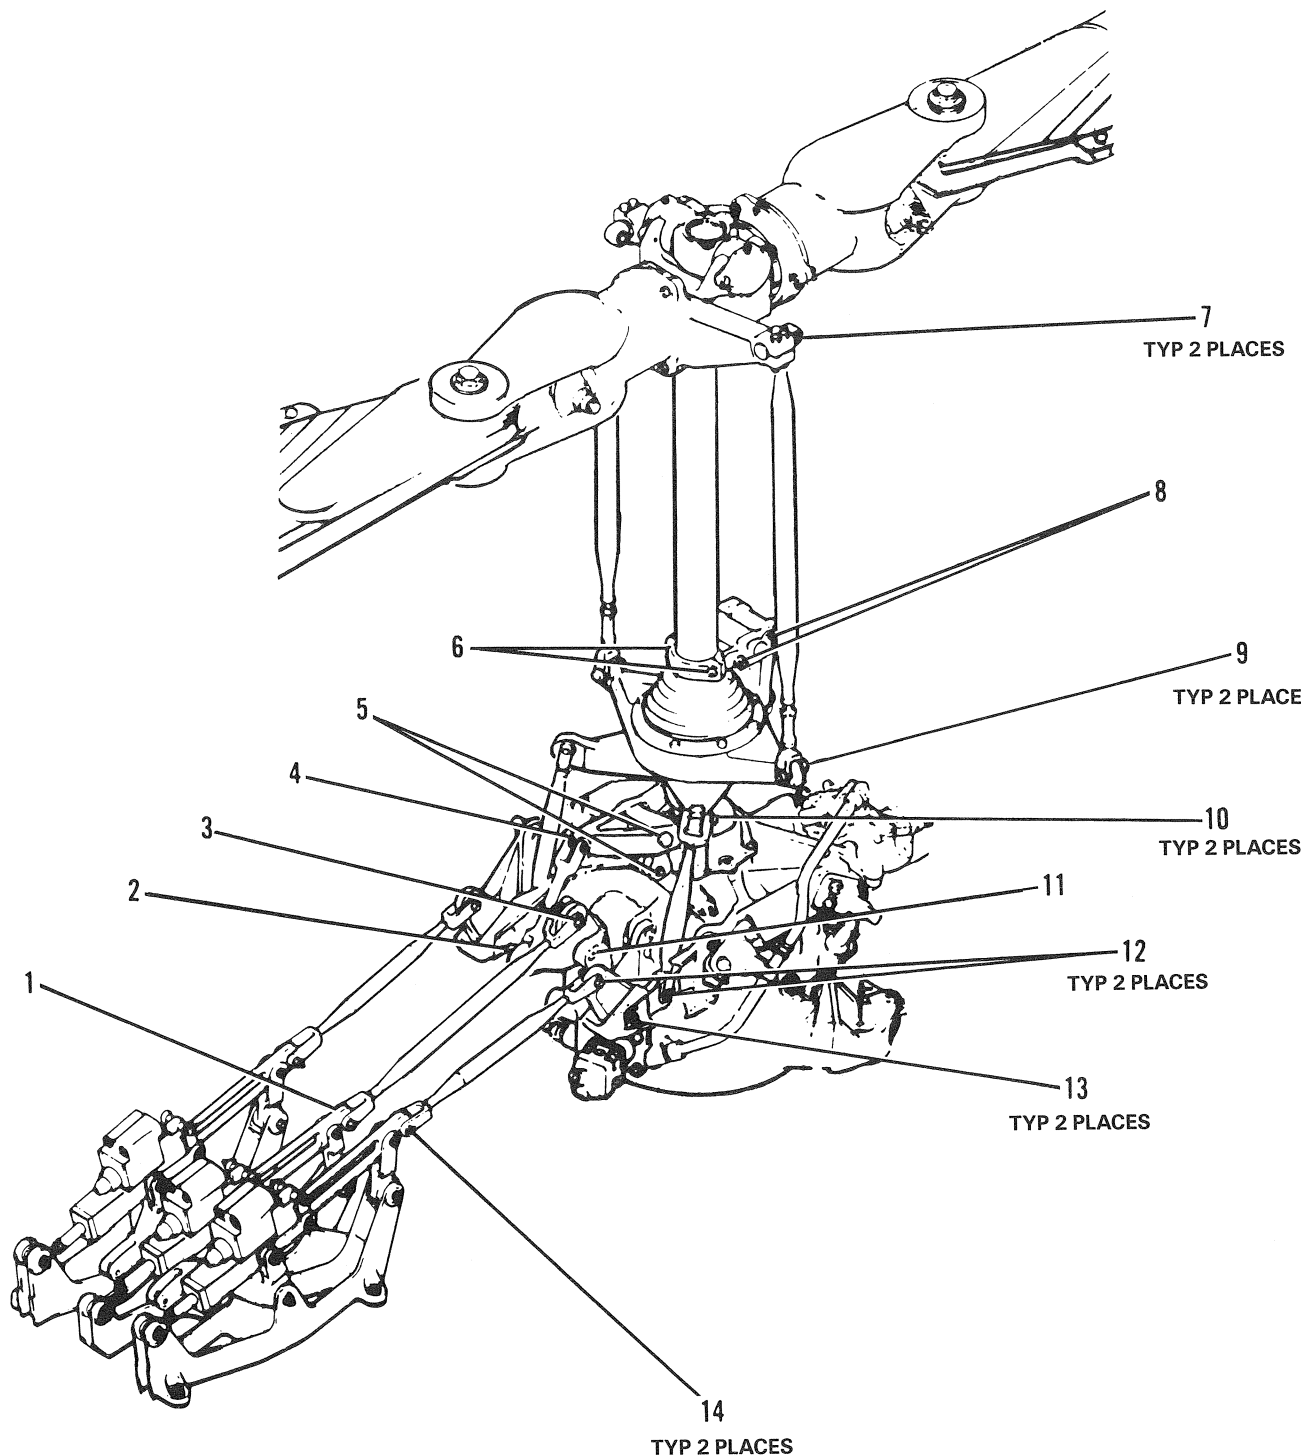

206L3-5-1-1

Figure 5-2. Inspection of Main Rotor Flight Control Bolts/Nuts (Sheet 1 of 2)

	QTY
1. Collective servo to control tube bolt	1
2. Collective bellcrank to control link assembly bolt	1
3. Control tube to collective bellcrank bolt	1
4. Control link to collective lever assembly bolt	1
5. Link assembly (collective lever to swashplate support) bolt	1
6. Swashplate drive collar set bolts	2
7. M/R pitch links to M/R hub pitch horn bolts	2
8. Swashplate drive link/lever assembly bolts	2
9. Swashplate to M/R pitch link bolts	2
10. Cyclic control tubes to swashplate bolts	2
11. Collective bellcrank pivot bolt	1
12. Control tube to cyclic bellcrank bolts	4
13. Cyclic bellcrank pivot bolts	2
14. Cyclic servo to control tube bolts	2

206L3-5-1-2

Figure 5-2. Inspection of Main Rotor Flight Control Bolts/Nuts (Sheet 2 of 2)

SCHEDULED INSPECTIONS

5-37. 60-MONTH INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
BHT-206L3-MM BHT-206L-CR&O	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>FREEWHEEL ASSEMBLY</u> NOTE This inspection applies to 206L3+ IGW Upgrade helicopters equipped with freewheel assembly 406-040-500-143. Do this inspection if an overhaul of the applicable freewheel assembly has not been accomplished in the last 60 months. 1. Remove the freewheel assembly. 2. Disassemble the freewheel assembly. NOTE Do not do a non-destructive inspection. It is not necessary to remove paint from the parts. 3. Examine the parts of the freewheel assembly for condition. 4. Restore the surface finish of the damaged part(s), as applicable. 5. Assemble the freewheel assembly. 6. Install the freewheel assembly.		

SCHEDULED INSPECTIONS

5-38. 300-HOUR OR 12-MONTH INSPECTION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-ELEC-SPM Chapter 62	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>BATTERY</u> Remove battery and recondition according to the BHT-ELEC-SPM and manufacturer's service manual. Inspect vent lines for obstructions or damage. Clean battery mounting area prior to installing reconditioned battery. <u>SWASHPLATE AND SUPPORT ASSEMBLY</u> Inspect the following components for signs of corrosion or mechanical damage, and for loose or worn bushings. a. Swashplate support assembly b. Collective lever c. Collective idler link d. Collective sleeve assembly		

SCHEDULED INSPECTIONS

5-39. 600 HOURS OF COMPONENT OPERATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
BHT-206-SI-2039	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	<u>TRANSMISSION</u> NOTE This inspection is applicable to transmission assemblies 206-706-045-103, 206-706-045-107, and 206-706-045-111. FPI not required for transmission assembly 206-706-045-107 with top case 206-040-550-101 (TB 206L-92-163). If increased power operation kit is installed, inspect transmission following directives provided in BHT-206-SI-2039.		

5-40. 600 HOURS OR 12 MONTHS OF COMPONENT OPERATION

Chapter 96

SCHEDULED INSPECTIONS

5-41. 1200 HOURS OF COMPONENT OPERATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
Chapter 63	<u>FREEWHEEL ASSEMBLY (WITH CLUTCH CL41742-1)</u>		
Chapter 63	1. Remove freewheel assembly.		
BHT-206L-CR&O	2. Disassemble, clean, and visually inspect freewheel assembly		
	3. Visually inspect clutch assembly, inner and outer race shaft assemblies, and bearings for serviceability.		
	4. Assemble freewheel assembly.		
Chapter 63	5. Install freewheel assembly.		
BHT-206L-CR&O	<u>MAIN ROTOR HUB ASSEMBLY</u>		
	1. Inspect yoke and trunnion bearing surfaces for brinelling.		
	2. Inspect yoke, latch bolts, strap pins, strap fittings, trunnion, pillow blocks, grips, and pitch horns for corrosion.		
	3. Visually inspect all hub components for excessive wear or damage.		

SCHEDULED INSPECTIONS

5-42. 1500 HOURS OF COMPONENT OPERATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 63 BHT-206A/B/L-Series- CR&O Chapter 63	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>MAIN ROTOR MAST</u> 1. Remove, disassemble, and clean main rotor mast. 2. Inspect main rotor mast as follows: a. Visually inspect mast splines for burrs, nicks, cracks, and wear. Indication of wear requires an over pins dimensional check. b. Visually inspect mast inner and outer surfaces for corrosion. Inspect surface protective coatings for condition. c. Visually inspect bearing balls and races for pits, erosion, spalling, and brinelling. 3. Reassemble and install main rotor mast. <u>TRANSMISSION</u> NOTE To increase the inspection interval to 2250 hours or 60 months, transmissions 206-040-004-107 and subsequent (206-040-004-115 and subsequent for 206L3+ IGW Upgrade helicopters) must have been operated with DOD-PRF-85734 oil since new or since last overhaul (TB 206L-04-213).		

SCHEDULED INSPECTIONS

5-42. 1500 HOURS OF COMPONENT OPERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 63	1. Remove transmission.		
	2. Remove mast assembly, oil filter, and housing assembly. Inspect oil filter for debris and metal contamination.		
BHT-206L-CR&O	3. Remove top case, planetary, and sun gear.		
	4. Perform a sun gear special inspection.		
	NOTE		
	Penetrant inspection not required for top case (206-040-550-101).		
	5. Penetrant inspect transmission top case. Stripping paint from exterior surface is not required.		
BHT-206L-CR&O	6. Install sun gear, planetary, and top case.		
Chapter 63	7. Install mast, oil filter, and transmission.		
	<u>FREEWHEEL ASSEMBLY (WITH CLUTCH CL42250-1)</u>		
Chapter 63	1. Remove freewheel assembly.		
BHT-206L-CR&O	2. Disassemble the freewheel assembly to the extent necessary to perform a visual inspection of the clutch assembly, inner shaft, and outer shaft. It is not necessary to remove the thrust bearing from the outer shaft. Remove all sealant and clean all parts. The stripping of paint is not required.		
	3. Visually inspect clutch assembly, inner and outer race shaft assemblies, and bearings for serviceability.		
	4. Assemble freewheel assembly.		
Chapter 63	5. Install freewheel assembly.		

SCHEDULED INSPECTIONS

5-43. 1500 HOURS OF COMPONENT OPERATION AND EVERY 50 HOURS THEREAFTER

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 62 ASB 206L-93-89	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	<u>SWASHPLATE SUPPORT 206-010-452-001/-005/-109</u> NOTE If windy conditions prevail, secure blades with tie-down to prevent excessive main rotor flapping. 1. Thoroughly clean swashplate support base area using drycleaning solvent (C-304) to remove all dirt, grease, and oil residue, then wipe dry. Visually inspect full circumference of fillet radius for cracks using a 10X magnifying glass. Pay particular attention to aft side of swashplate support assembly. 2. If after accomplishment of step 1 a crack is suspected, carry out further inspection by dye penetrant inspection method (BHT-ALL-SPM, Chapter 6). Paint finish may be removed as required in suspected area.		

SCHEDULED INSPECTIONS

5-44. 2250 HOURS OR 60 MONTHS OF COMPONENT OPERATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 63 BHT-206L-CR&O	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>TRANSMISSION</u> NOTE This inspection is applicable to transmission assemblies 206-040-004-107 and subsequent (206-040-004-115 and subsequent for 206L3+ IGW Upgrade helicopters) that have been operating with DOD-PRF-85734 oil since new or since last overhaul (TB 206L-04-213). If the transmission has been operated with MIL-PRF-7808 oil, the 1500 Hours of Component Operation scheduled inspection applies. 1. If installed on the helicopter, remove the transmission assembly. 2. Remove the mast and swashplate assembly from the transmission assembly. 3. Inspect oil filter for debris and metal contamination. 4. Remove the transmission top case, the planetary assembly, and the sun gear. 5. Visually examine all removed components for condition.		

SCHEDULED INSPECTIONS

5-44. 2250 HOURS OR 60 MONTHS OF COMPONENT OPERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 63	6. Insert a mirror between the spiral bevel gear edge and the lower case and use a bright light to examine the spiral bevel gear, input pinion gears, and surrounding areas for condition.		
	7. Reassemble the transmission.		
	8. Install the mast and swashplate assembly into the transmission assembly.		
	9. Apply sealant, primer, and paint to the required areas.		
	10. Install the transmission assembly into the helicopter.		
Chapter 12	11. Service the transmission with oil (DOD-PRF-85734).		

SCHEDULED INSPECTIONS

5-45. 3000 HOURS OF COMPONENT OPERATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	<u>TAIL ROTOR GEARBOX</u> NOTE This inspection may be accomplished concurrently with the duplex bearing (206-040-410-003, -005, -101 or subsequent) replacement at 3000 hours. 1. Perform backlash check of the gearbox prior to disassembly. Backlash shall be 0.003 to 0.011 inch (0.08 to 0.28 mm) and shall not vary more than 0.002 inch (0.05 mm) when measured at three different locations. Record backlash for later reference. NOTE If this inspection is being done in conjunction with replacement of bearing (206-040-410-003, -005, -101 or subsequent), removal of input pinion assembly is not required. Remove output cap, output shaft, and duplex bearing (206-040-410-003, -005, -101 or subsequent) after complying with step 1. 2. Remove input pinion and bearings. Remove output cap and oil level sight glass. 3. Inspect spiral bevel gear and input pinion gear for corrosion and chipped, broken, or worn gear teeth. Inspect gear wear patterns.		

SCHEDULED INSPECTIONS

5-45. 3000 HOURS OF COMPONENT OPERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	4. Visually inspect accessible areas of input pinion duplex bearing, input pinion roller alignment bearing, and output shaft roller alignment bearing and race for roughness, spalling, scoring, pitting, flaking, broken or damaged retainers, and for evidence of overheating and corrosion. 5. Visually inspect studs and dowel pins in case assembly for security and damage. Replace damaged studs and/or dowel pins. 6. Inspect accessible areas of case and output cap for corrosion and damage. 7. Inspect sight glass for cracking, crazing, or any condition that may obscure level or color of oil. Inspect oil level indicator for discoloration, peeling paint, or evidence of a plastic film on painted side. Remove plastic film if present. 8. Reassemble gearbox. Exercise caution when inserting input pinion assembly, if previously removed, to ensure proper gear mesh with spiral bevel gear. 9. Check gearbox backlash. Measured values shall be within 0.001 inch (0.03 mm) of those obtained in step 1. NOTE If input pinion and spiral bevel gear were replaced at this time, backlash figures may not fall within 0.001 inch (0.03 mm) of those obtained in step 1. Backlash shall, however, fall within overhaul limits. 10. Apply sealant and touch up finish as required.		

SPECIAL INSPECTIONS

5-46. SPECIAL INSPECTIONS

Accomplish the following special inspections on the helicopter ([paragraph 5-47](#) through [paragraph 5-51](#)):

- After fuel system maintenance and/or component change
- 1 to 5 hours after each installation
- 3 to 8 hours after each installation
- 10 to 25 hours after each installation
- 100 hours after each installation

SPECIAL INSPECTIONS

5-47. AFTER FUEL SYSTEM MAINTENANCE AND/OR COMPONENT CHANGE

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ NOTE Accomplish immediately after fuel system maintenance and/or component change/removal, at an adequate maintenance facility. <u>FUEL SYSTEM</u> NOTE Installation and removal of a fuel boost pump cartridge, fuel quantity probe, or fuel drain valve does not require this inspection. If fuel system maintenance and/or component change/removal is performed at a site remote from an adequate maintenance facility, accomplish step 1, substep c through substep e, and step 3, or step 2 and step 3, as applicable, prior to flight. Upon return to an adequate maintenance facility, but not to exceed 10 flight hours, accomplish entire inspection. 1. When maintenance or component change/removal is conducted below the top fitting of the aft fuel cell immediately following fuel system maintenance and/or major component change/removal (boost pump assembly, manifold, flow switches, inline filters, ejector pumps, check valves, fuel line or hoses), ground run helicopter and check for air and fuel leaks and for proper operation as follows:		

Chapter 28

SPECIAL INSPECTIONS

5-47. AFTER FUEL SYSTEM MAINTENANCE AND/OR COMPONENT CHANGE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 12 BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade)	a. Make sure all fuel has been drained from aft and forward fuel cells. b. Service fuel cell with 10 gallons (37.9 L) of fuel. c. Perform normal engine starting and run-up checks. d. Set throttle to full open and operate engine at 100% N₂ for a minimum of 2 minutes with both fuel boost pumps OFF. If flameout or power loss occurs, refer to step 3. e. Perform normal engine shutdown. NOTE Helicopter S/N 51244 and subsequent may comply with substep f by placing fuel quantity switch to forward position to ensure fuel transfer from aft to forward fuel cells has not taken place. Chapter 28 f. Remove fuel quantity probe from left forward fuel cell. Inspect cell to ensure fuel transfer from aft to forward fuel cells has not taken place. g. Reinstall fuel quantity probe. 2. When maintenance and/or component change is conducted above the top fitting of the fuel cell, immediately following the fuel system maintenance and/or component change/removal (fuel pressure transducer, fuel valve, scheduled fuel component change/removal fuel line or hose), ground run helicopter and check for air or fuel leaks and for proper operation as follows: a. Perform normal engine start and run-up checks. BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade)		

SPECIAL INSPECTIONS

5-47. AFTER FUEL SYSTEM MAINTENANCE AND/OR COMPONENT CHANGE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2	b. Set throttle to full open and operate engine at 100% N₂ for a minimum of 2 minutes with both fuel pumps OFF. If flameout or power loss occurs, refer to step 3.		
	3. If flameout or power loss occurs, air is entering the helicopter or engine fuel system, or an engine pneumatic leak exists. Malfunction must be corrected before commencing flight operations.		
	a. Verify fuel boost pump, check valve, and fuel shutoff valve for proper operation.		
	b. Make sure all hoses and lines are serviceable and do not have cracked flares and that B nuts are correctly torqued.		
	c. Purge air from fuel system and accomplish pneumatic leak check.		

SPECIAL INSPECTIONS

5-48. 1 TO 5 HOURS AFTER EACH INSTALLATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Chapter 62	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____		
	<u>MAIN ROTOR</u> Torque check main rotor mast nut 250 to 275 foot-pounds (339.0 to 372 Nm) (TB 206L-07-223).		

SPECIAL INSPECTIONS

5-49. 3 TO 8 HOURS AFTER EACH INSTALLATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
BHT-206L-CR&O	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>MAIN ROTOR</u> Torque check pillow block retention bolts/nuts 84 to 107 inch-pounds (9.4 to 12 Nm) (ASB 206L-97-108). Check for misalignment of anti-slippage marks.		

SPECIAL INSPECTIONS

5-50. 10 TO 25 HOURS AFTER EACH INSTALLATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 62 Chapter 65	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>SWASHPLATE ASSEMBLY</u> Check swashplate tilt friction. Value must be between 15 to 32 pounds (67 to 142 N). If not within limits, adjust to 15 to 32 pounds (67 to 142 N). Check tilt friction every 10 to 25 hours until it is stabilized. <u>DISC PACK COUPLING</u> Torque check disc pack coupling attaching hardware as follows: 1. Apply the minimum torque required for the fasteners. If the fasteners do not move, the check is completed. Check torque seal and apply as required. 2. If the fastener(s) moved, do the steps that follow: a. Remove the affected disc pack coupling and examine the bolts, nuts (minimum tare torque, refer to BHT-ALL-SPM) and washer for condition. Discard damaged parts. b. Examine the disc pack coupling for condition. Discard damaged disc pack coupling. c. Install the removed disc pack coupling and repeat torque check after 10 to 25 hours.		

SPECIAL INSPECTIONS**5-50. 10 TO 25 HOURS AFTER EACH INSTALLATION (CONT)**

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 65	<u>TAIL ROTOR GEARBOX</u> Torque check tail rotor gearbox retaining nuts 50 to 70 inch-pounds (5.6 to 7.9 Nm). Repeat every 10 to 25 hours until torque has stabilized.		

SPECIAL INSPECTIONS

5-51. 100 HOURS AFTER EACH INSTALLATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
Chapter 71 Chapter 53 Chapter 63	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>POWER PLANT</u> 1. Torque check engine mount attachment hardware at engine and airframe attachment points. 2. If fastener is improperly torqued, do the following: a. Check nuts tare torque, and bolt threads and shanks for damage. b. Check engine mounts and supporting structure for damage. c. Install new fastener if required, and apply torque. Recheck torque at next 100 hours.		
	<u>TAILBOOM</u> Torque check tailboom attachment nuts 375 to 415 inch-pounds (42.4 to 46.8 Nm).		
	<u>TRANSMISSION</u> 1. Replace oil filter element and oil. Inspect removed element for metal particles. If particles are found, investigate to determine cause.		

SPECIAL INSPECTIONS

5-51. 100 HOURS AFTER EACH INSTALLATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-ALL-SPM	NOTE If a nut is improperly torqued, remove and check tare torque, and replace as required. Recheck torque at next 100 hours. 2. Check transmission top case stud nuts for torque. a. For transmission (206-040-004-101/-111) 100 to 140 inch-pounds (12 to 15 Nm). b. For transmission (206-040-004-107/-115) 130 to 160 inch-pounds (15 to 18 Nm). 3. Touch up paint finish as required.		

CONDITIONAL INSPECTIONS

5-52. CONDITIONAL INSPECTIONS

Accomplish the applicable conditional inspections (paragraph 5-53 through paragraph 5-59) of the helicopter after the following:

- Hard landing
- Sudden stoppage/acceleration
- Overspeed — Main rotor — 114% or greater
- Overtorque
- Engine compressor stall or surge
- Lightning strike
- Engine overtemp

CONDITIONAL INSPECTIONS

5-53. HARD LANDING

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>HARD LANDING</u> A hard landing is defined as any incident in which the impact of the helicopter with the ground causes severe pitching of the main rotor. Blades involved in this type of hard landing must be thoroughly inspected visually. If no obvious damage is discovered, the blades may be retained in service for continued usage. If, on a hard landing, either main rotor blade comes into contact with the ground, tailboom, or other foreign object, both main rotor blades are to be regarded as having been involved in a Sudden Stoppage and must be returned to a Bell Helicopter Textron approved blade repair station for inspection. The airframe landing skids and crosstubes will deform and yield under load forces in excess of 2.5 G's. If the cabin fuselage contacts the ground, the G forces in the fuselage increase abruptly. If, following a hard landing, the cabin fuselage is resting on the ground or shows evidence of having touched the ground, it is considered to have sustained a 10 G load. If on a hard landing shear pin in elevator control tube (206-001-098) is sheared, eyebolt (206-001 -902) that retains elevator control tube (206-601-898) to torque tube (206-801-386) must be replaced as well as elevator control tube (206-001-098).		

CONDITIONAL INSPECTIONS

5-53. HARD LANDING (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Rolls-Royce 250-C30P Series Operation and Maintenance Manual, 14W2	— Inspect. NOTE Components removed from helicopter for inspection following a hard landing, shall be evaluated as an interrelated group. Removal records accompanying each component shall cross-reference part and serial numbers of other drive system components removed for evaluation. 1. Inspect landing gear skid tubes and crosstubes for damage and deflection. Inspect crosstube attachment points for damage or distortion. 2. Check all cowlings, fairings, and doors for proper fit and alignment. Misaligned cowlings, fairings, or doors may indicate a distorted fuselage, resulting in major stresses and damage to components. 3. Remove all cowlings and fairings necessary to perform a complete visual inspection. 4. Inspect engine. 5. Using a 10X magnifying glass, inspect structure around the transmission mounting points. Particular attention should be given to the transmission restraint system and transmission mount stops for sheared bolts, and damaged drag pins and supports. 6. Inspect tail skid tube and mounting for damage. Inspect tailboom internally and externally for cracks, distortion, and sheared or loose rivets. Inspect the tailboom attachment points for elongated bolt holes and damaged structure.		

CONDITIONAL INSPECTIONS

5-53. HARD LANDING (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH	OTHER
	7. Perform a complete visual inspection of the flight control system from pilot controls to main rotor head for bent or damaged tubes, bellcranks, and supports, and for damaged bearings. Particular attention should be given to the pitch link assemblies and swashplate pivot assembly. In addition to inspection pitch link assemblies for damage, inspect for corrosion and cracks (pay particular attention to swaged ends of jam nut or insert faying surface), and inspect for wear in pitch horn trunnion bearings. NOTE Control tubes and pitch link assemblies may be inspected for bends by rolling on a surface plate or with the use of a metal straight edge. On fixed control tubes, the swaged end must be concentric to tube within 0.06 inch (1.5 mm) total indicator reading. Inspect bearings for smoothness and maximum allowable wear. 8. Check for leaks in hydraulic system, interference or binding of hydraulic actuators, and controls and for satisfactory operation. 9. Inspect main rotor mast as follows: a. Inspect mast for indentations caused by hard contact by main rotor hub static stops. b. Inspect cabin roof shell and beam supporting the transmission mount support assemblies for cracks or deformation. c. Inspect transmission up and down stops for deformation and for loss of attachment nut torque. d. Inspect the transmission restraint and drag pins for damage. Inspect cabin roof shell and beam supporting transmission restraint for cracks or deformation.		

CONDITIONAL INSPECTIONS

5-53. HARD LANDING (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade helicopters)	e. Start engine and check main rotor, while in a flat pitch condition, for any evidence of a 1/rev vibration. If one or more of the previous inspections requirements, step 9, substep a through substep d, reveals an unsatisfactory condition, a mast runout inspection must be performed.		
BHT-206L-CR&O	f. If damage in any of the previous requirements of step 9, substep a through substep e is noted, the main rotor hub assembly must be inspected in accordance with the Special Inspection criteria. 10. Inspect main rotor blades for contact with tailboom. If damage is found, accomplish paragraph 5-54, Sudden Stoppage — Main Rotor 11. Inspect tail rotor blades for damage. If damage is found, accomplish paragraph 5-54, Sudden Stoppage — Tail Rotor. 12. Inspect fuel and oil systems for damage. Before flight, check fuel and oil systems for leaks. 13. Inspect engine mounts at fuselage attachment points for cracks.		
BHT-206L-CR&O	14. If damage described in step 15 and/or step 16 is found, remove main rotor blades. Send main rotor blades to a Bell Helicopter Textron authorized blade repair facility for evaluation.		
BHT-206L-CR&O	15. If damage to fuselage structure, skid gear, or tailboom is such that a major repair, replacement, or alignment is necessary, remove the following components and conduct a major overhaul. a. Main rotor hub assembly. b. Swashplate and support assembly. c. All control tubes, bolts, bellcrank, levers, and support assemblies. d. Pitch link assemblies, main rotor, and tail rotor. e. Transmission and mast assembly.		

CONDITIONAL INSPECTIONS

5-53. HARD LANDING (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	f. Main driveshaft assembly (grease lubricated). For 206L3+ IGW Upgrade helicopters, remove and discard the engine to transmission KAflex driveshaft. g. Tail rotor shafts and bearings. h. Tail rotor gearbox. i. Tail rotor hub and blades. j. Transmission restraint and mount systems. k. Inspect engine mounts at fuselage attachment points for cracks.		
	16. If damage to mast is indicated as a result of excessively hard contact of main rotor hub static stop, replace mast, remove the following components, and conduct a major overhaul on them. a. Main rotor hub assembly. b. Transmission assembly. c. Main driveshaft assembly (grease lubricated). For 206L3+ IGW Upgrade helicopters, remove and examine the engine to transmission KAflex driveshaft for deformation and cracks. If deformation or cracks are found, discard the driveshaft. d. Transmission restraint. e. Remove main rotor blades and send to a Bell Helicopter Textron approved blade repair facility for evaluation. 17. If damage is found in rotating controls, inspect and/or replace the following: a. Main rotor hub assembly pitch horns. b. Swashplate assembly. c. All connecting control tubes and control bolts.		

CONDITIONAL INSPECTIONS

5-54. SUDDEN STOPPAGE/ACCELERATION

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>SUDDEN STOPPAGE/ACCELERATION — MAIN ROTOR</u> Sudden stoppage/acceleration is defined as any rapid deceleration or acceleration of the drive system whether caused by seizure within the drive system, impact of the main rotor with the ground or with a foreign object of sufficient inertia to cause rapid deceleration; or a sudden freewheel clutch engagement. NOTE Components removed from helicopter for evaluation following a sudden stoppage/acceleration shall be evaluated as an interrelated group. Removal records accompanying each components shall cross-reference part and serial numbers of other drive system components removed for evaluation. 1. After a sudden stoppage inspect main rotor blades as follows: a. Inspect blade skin and bonded doublers for visible damage. b. Remove tip cover plate from both main rotor blades. c. Check tip weights. If any movement of tip weights has occurred, blade shall be scrapped.		

5-54. SUDDEN STOPPAGE/ACCELERATION (CONT)

1

CONDITIONAL INSPECTIONS

5-54. SUDDEN STOPPAGE/ACCELERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH	OTHER
BHT-206L-CR&O	CAUTION IF MAIN ROTOR MAST HAS EVIDENCE OF TORSIONAL YIELDING, THE MAST ASSEMBLY, TRANSMISSION ASSEMBLY, MAIN DRIVESHAFT, AND FREEWHEEL ASSEMBLY (OUTER RACE, INNER RACE AND CLUTCH) SHALL BE CONSIDERED UNSERVICEABLE AND SCRAPPED. MAJOR DAMAGE TO THE MAST ASSEMBLY OTHER THAN TORSIONAL YIELDING REQUIRES REPLACEMENT OF TRANSMISSION TOP CASE. IF TRANSMISSION TOP CASE HAS TO BE SCRAPPED, PYLON MOUNT SPINDLES AND MAST BEARING(S) SHALL ALSO BE SCRAPPED. (2) Torsional yielding may be detected by measuring the offset between the mast splines above and below the main rotor trunnion split cone groove by sliding a straight edge across the upper and lower unworn face of the spline (coast side of the spline). c. Transmission assembly. d. Swashplate assembly. NOTE Replace all control bolts from hydraulic servo actuator to main rotor hub. e. All cyclic and collective control tubes from mixing lever to swashplate. f. Pitch link assemblies. g. Freewheel assembly. h. Main driveshaft assembly (grease lubricated). If KAflex driveshaft is installed (206L3+ IGW Upgrade helicopters), it shall be scrapped.		

CONDITIONAL INSPECTIONS

5-54. SUDDEN STOPPAGE/ACCELERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	i. Inspect transmission restraint and transmission mount system for condition, and fuselage attachment points for cracks.		
BHT-206L-CR&O	j. Inspect engine mounts at fuselage attachment points for cracks.		
	NOTE If a tail rotor driveshaft failed as a result of torsional overload, ALL hangers, driveshaft, adapters, impellers, and disc couplings shall be considered unserviceable and scrapped. Inspect hanger attachment points for cracks and distortion. Overhaul tail rotor gearbox to ensure airworthiness. If a tail rotor driveshaft has been damaged by main rotor strike or damaged other than torsional overload, ALL bonded tail rotor driveshafts, plus the hanger assemblies, adapters, and disc couplings fore and aft of the damaged area shall be considered unserviceable and scrapped. Inspect remaining hanger assemblies, adapters, and disc couplings according to step l and step m. Inspect hanger attachment points for cracks and distortion.		
BHT-206L-CR&O	k. Inspect tail rotor driveshafts for out-of-round condition, and distortion or bowing exceeding the limits specified. If any defect is detected, scrap ALL bonded tail rotor driveshafts.		
	l. Inspect steel tail rotor drive shaft and steel adapters for cracks using magnetic particle inspection method.		
BHT-ALL-SPM	m. Inspect tail rotor driveshaft hangers, and disc couplings and aluminum driveshaft adapters using fluorescent penetrant inspection method.		
	4. In addition to step 3, substep k through substep m, and related notes, all bonded tail rotor driveshafts shall be considered unserviceable and scrapped, if during a sudden stoppage/acceleration inspection any of the following conditions which are attributable to the sudden stoppage/acceleration are noted: a. Any impact damage to a main rotor blade leading or lower skin, or any main rotor blade skin buckling or tears.		

CONDITIONAL INSPECTIONS

5-54. SUDDEN STOPPAGE/ACCELERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH	OTHER
Rolls-Royce 250-C30P Series Operation and Maintenance Manual, 14W2	b. Main rotor mast is sheared, power on or off. Mast shows indication of torsional yielding, out-of-round, or Total Indicated Runout (TIR) check exceeds limits. c. Any deformation of any coupling disc which results in gaps between laminates greater than 0.015 inch (0.381 mm). d. Structural failure or distortion of any coupling disc bolts. e. Structural failure, or distortion exceeding the specified limits of the tail rotor driveshaft steel or aluminum adapters. 5. Refer to Rolls-Royce 250-C30P Series Operation and Maintenance Manual, 14W2 for sudden stoppage inspection requirements. <u>SUDDEN STOPPAGE/ACCELERATION — TAIL ROTOR</u> Sudden stoppage/acceleration is defined as any rapid deceleration or acceleration of the torsional drive system whether caused by seizure within the helicopter drive system, or by contact of the tail rotor blade(s) with the ground, water, or with a foreign object of sufficient inertia to cause rapid deceleration; or a sudden freewheel clutch engagement, or a compressor stall causing rapid acceleration.  CAUTION DAMAGE TO TAIL ROTOR BLADE ASSEMBLY COULD BE PRESENT ALTHOUGH IT MAY NOT BE READILY DETECTED BY STANDARD VISUAL, DIMENSIONAL, AND MAGNETIC PARTICLE OR FLUORESCENT PENETRANT INSPECTION METHODS.		

CONDITIONAL INSPECTIONS

5-54. SUDDEN STOPPAGE/ACCELERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
BHT-ALL-SPM	NOTE Components removed from helicopter for evaluation following a sudden stoppage/acceleration shall be evaluated as an interrelated group. Removal records accompanying each component shall cross-reference part and serial numbers of other drive system components removed for evaluation. 1. Remove and scrap tail rotor hub and blade assembly. 2. Overhaul the following components: a. Tail rotor gearbox assembly. b. Freewheel assembly. NOTE Not applicable to KAflex driveshaft installed on 206L3+ IGW Upgrade helicopters. c. Main driveshaft assembly (grease lubricated). d. Tail rotor pitch change mechanism. 3. Inspect all tail rotor driveshaft, impeller, steel and aluminum adapters, flexible coupling discs, and hangers using magnetic particle or fluorescent penetrant methods. 4. Visually inspect shafts for evidence of twisting, check for out-of-round and Total Indicated Runout (TIR) exceeding specified limits. Inspect the bonds between the tail rotor driveshaft and bonded adapter for integrity. If any defect is detected, scrap ALL bonded tail rotor driveshafts. 5. Inspect tail rotor hanger support at tailboom and fuselage attachment points for cracks. 6. Inspect tail rotor hanger support for cracks and distortion.		

CONDITIONAL INSPECTIONS

5-54. SUDDEN STOPPAGE/ACCELERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH	OTHER
	NOTE If tail rotor driveshaft failed as a result of torsional overload, ALL hangers, driveshafts, adapters, impeller, and disc couplings shall be considered unserviceable and scrapped. Inspect hanger attachment points for cracks and distortion. Ensure airworthiness of tail rotor gearbox by conducting a major overhaul. If a tail rotor driveshaft has been damaged by main rotor strike or damage other than torsional overload, ALL bonded tail rotor driveshafts, plus the hanger assemblies, adapter, and disc couplings fore and aft of the damaged area shall be considered unserviceable and scrapped. Inspect remaining hanger assemblies, adapters and disc couplings using magnetic particle or fluorescent penetrant inspection, whichever is applicable for cracks and distortion. 7. In addition ALL bonded tail rotor driveshaft shall be considered unserviceable and scrapped, if during a sudden stoppage inspection any of the following conditions which are attributable to the sudden stoppage are noted: a. Any impact damage to a tail rotor blade leading edge or skin, or any tail rotor blade skin buckling or tears. b. Any deformation of any coupling discs which results in gaps between laminates greater than 0.015 inch (0.381 mm). c. Structural failure or distortion of any coupling disc bolts. d. Structural failure, or distortion exceeding the specified limits of the tail rotor driveshaft steel or aluminum adapter. 8. Inspect tailboom area of tail rotor gearbox mounting studs and dowel pins for cracks using a 10X magnifying glass or fluorescent penetrant method of inspection. 9. Inspect the four tailboom attachment points for cracks, distortion damage and security. Check torque on nuts of tailboom attachment bolts.		

CONDITIONAL INSPECTIONS

5-54. SUDDEN STOPPAGE/ACCELERATION (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206-SRM-1 Rolls-Royce 250-C30P Series Operation and Maintenance Manual, 14W2	10. Inspect tailboom internally for cracks, distortion, and loose or missing rivets. Check external skin of tailboom for cracks and waviness paying particular attention to area of horizontal stabilizer and attachment points of vertical fin. 11. Inspect horizontal stabilizer for cracks and looseness. 12. Inspect vertical fin for security and overall condition. Check tail skid for condition and security. Check mounting of anticollision light for security and condition. 13. Refer to Rolls-Royce 250-C30P Series Operation and Maintenance Manual, 14W2 for sudden stoppage inspection requirements.		

CONDITIONAL INSPECTIONS

5-55. OVERSPEED MAIN ROTOR — 114% OR GREATER

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>OVERSPEED MAIN ROTOR — 114% OR GREATER</u> NOTE Components removed from a helicopter for evaluation following an overspeed shall be evaluated as an interrelated group. Removal records accompanying each component shall cross-reference part and serial numbers of other drive system components removed for evaluation. For main rotor overspeeds above 107% and up to 114%, visually inspect main rotor blades and tail rotor blades for skin wrinkles or damage. If damage or wrinkles are detected, accomplish complete overspeed inspection. 1. If the main rotor overspeeds in excess of 114% RPM, proceed with the following: a. Replacement of the following items is mandatory: (1) Tension/torsion straps. (2) Inboard strap fittings and pins. (3) Latch bolts. b. Main rotor blades.		

CONDITIONAL INSPECTIONS

5-55. OVERSPEED MAIN ROTOR — 114% OR GREATER (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	(1) Dimensionally check main rotor blade retention bolt hole for indications of permanent deformation or damage. If inside diameter of bushing in the hole is elongated in excess of 0.0015 inch (0.0381 mm), remove blade from service and return it to a Bell Helicopter Textron approved major overhaul facility for further inspection. Any evident looseness of bushing is cause for scrapping blade. (2) Remove tip cap assembly from main rotor blade and inspect tip cap attaching screws for deformation. Any deformation of screws or elongation of mating holes in the spar is cause for scrapping blade. (3) Visually inspect main rotor blade for skin wrinkles or deformation. If any indication of wrinkles or deformation exists, return blade to a Bell Helicopter Textron approved major overhaul facility for evaluation. (4) If main rotor blades pass the previous inspection, they are acceptable for continued service. c. Tail rotor blades. (1) If one of the tail rotor blades of a pair has been damaged badly enough that metal has been torn or any bond plies have separated, then both blades and tail rotor hub must be scrapped. (2) If contour of a blade has been damaged slightly (distortion) then both blades and tail rotor hub must be scrapped. (3) If any movement of the tip block or root end balance weights has occurred, scrap tail rotor hub assembly and both tail rotor blades. (4) If tip block is cracked, scrap tail rotor hub assembly and both tail rotor blades. (5) If tail rotor blades pass the above inspection requirements and no other discrepancies exist, the blades are acceptable for continued service.		

CONDITIONAL INSPECTIONS

5-55. OVERSPEED MAIN ROTOR — 114% OR GREATER (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	d. Main and tail rotor hub assemblies shall be inspected by conducting a special accident/incident overhaul inspection.		
BHT-ALL-SPM	e. Inspect oil cooler fan impeller for visible distortion or cracks of the brazed vane joints using dye penetrant inspection method.		
Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2	2. Engine. Refer to the Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2.		

CONDITIONAL INSPECTIONS

5-56. OVERTORQUE

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>OVERTORQUE — 110 TO 120%</u> NOTE Components removed from a helicopter for evaluation following an overtorque shall be evaluated as an interrelated group. Removal records accompanying each component shall cross-reference part and serial numbers of other drive system components removed for evaluation. NOTE If overtorque above 100% up to 110% should occur, no inspection is required. 1. If overtorque above 110% up to 120% should occur, perform the following: a. Conduct a visual inspection of the following listed assemblies (installed on the helicopter) for any evidence of damage, deformation, yielding, etc. (1) Main rotor blades and attachments. Blade for skin wrinkles and bond separation. If any indications of wrinkles or deformation exists, send blades to a Bell Helicopter Textron approved blade repair facility for evaluation. (2) Main rotor hub assembly.		

CONDITIONAL INSPECTIONS

5-56. OVERTORQUE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH	OTHER
BHT-206L3-FM-1 (BHT-206L4-FM-1 for 206L3+ IGW Upgrade) Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2	(3) Transmission top case. (4) Transmission mount fittings at upper attachment points and lower stop mounts. (5) Cabin roof and beam at transmission restraint support assembly attachment points. (6) Cabin roof and beam at nodal beam support attachment points. (7) Tail rotor hub, blades, and attachments. b. Start engine and check main rotor, while in a flat pitch condition, for any evidence of a 1/rev vibration or lateral vibration. c. If one or more of the previous inspection requirements in step a, substep (1), substep (2), and/or step b reveals an unsatisfactory condition, a mast run-out inspection must be performed. d. Check mast for torsional yielding as follows: (1) Check offset between mast splines above and below main rotor split cone groove by sliding a 0.1600 inch diameter measuring pin along spline, across the groove, or: (2) Slide a straight edge across upper and lower unworn face of spline grooves (coast side of spline). e. Transmission electric chip detectors. f. Remove, disassemble, and inspect main driveshaft couplings for indications of wear and overheating. For 206L3+ IGW Upgrade helicopters, remove and examine the engine to transmission KAflex driveshaft for deformation and cracks. If deformation or cracks are found, discard the driveshaft. 2. Refer to the Rolls-Royce 250-C30 Series Operational and Maintenance Manual for applicable inspection.		

CONDITIONAL INSPECTIONS

5-56. OVERTORQUE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH	OTHER
	3. After the first 25 hours following an overtorque, conduct a thorough visual inspection of the following: a. Main rotor blades and attachments. b. Main rotor hub assembly. c. Main rotor mast. d. Transmission top case. e. Transmission mount link assemblies, link attachments, and arm and support assemblies. f. Cabin roof shell and beam at transmission mount attachment points. g. Transmission restraint attachment at stop mounts, support, and cabin roof shell and beam. h. Transmission electric chip detectors. i. Tail rotor gearbox chip detector and gearbox attachments. j. Tail rotor hub, blades, and attachments. <u>OVERTORQUE — ABOVE 120%</u> NOTE Components removed from helicopter for evaluation following an overtorque shall be evaluated as an interrelated group. Removal records accompanying each component shall cross-reference part and serial numbers of other drive system components removed for evaluation.		

CONDITIONAL INSPECTIONS

5-56. OVERTORQUE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2	NOTE The overhaul inspection criteria in the specific sections, including limit charts and other pertinent information, should be used to establish that the detail parts in each assembly are dimensionally within limits and have not yielded or become deformed. 1. If an overtorque above 120% occurs, accomplish all inspections required for overtorque — 110 to 120% and in addition, conduct following inspection: a. Main Rotor Hub. Remove and accomplish special accident/incident overhaul inspections. b. Main Rotor Mast. Remove and accomplish special accident/incident overhaul inspections. c. Main Transmission. Remove and overhaul. Replace top case of main transmission and transmission link attachments. During overhaul, inspect gear patterns for shifting and scuffing. d. Remove and overhaul main driveshaft (grease lubricated). For 206L3+ IGW Upgrade helicopters, remove and examine KAflex driveshaft for deformation and cracks. If deformation or cracks are found, discard the driveshaft. e. Freewheel assembly. Remove and overhaul. 2. Refer to the Rolls-Royce 250-C30 Series Operation and Maintenance Manual, 14W2 for applicable inspection. 3. After the first 25 hours following an overtorque, conduct a thorough inspection of the following: a. Main rotor blades and attachments. b. Main rotor hub assembly. c. Main rotor mast.		

CONDITIONAL INSPECTIONS

5-56. OVERTORQUE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	d. Transmission top case. e. Transmission spindles, pylon support links, and mount fittings. f. Cabin roof shell and beam at transmission mount attachment points. g. Transmission restraint attachment. h. Transmission electric chip detectors. i. Tail rotor gearbox chip detectors and gearbox attachments. j. Tail rotor hub, blades, and attachments.		

CONDITIONAL INSPECTIONS

5-57. ENGINE COMPRESSOR STALL OR SURGE

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ An engine compressor stall or surge can be described as a sharp rumble, a series of loud sharp pops, severe engine vibration, or a rapid rise in Turbine Outlet Temperature (TOT) depending on the severity of stall or surge. When a stall or surge is suspected, follow steps as dictated by reported conditions. The components removed from the helicopter for evaluation following a compressor stall or surge shall be evaluated as a matched group. The records accompanying each component shall cross-reference part and serial numbers of other drive system components removed for evaluation. 1. Obtain a pilot's report of the circumstances related to the suspected compressor stall or surge to determine if it corresponds to one of the following conditions: - If the stall or surge occurred on the ground or in flight at any N_R speed or torque setting and there was no noticeable yaw of the helicopter, do Part I and Part II of this inspection. - If the stall or surge occurred on the ground or in flight at any N_R speed or torque setting and there was a noticeable yaw of the helicopter, do Part I, Part II, and Part III of this inspection.		

CONDITIONAL INSPECTIONS

5-57. ENGINE COMPRESSOR STALL OR SURGE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Rolls-Royce 250-C30P Operation and Maintenance Manual, 14W2	PART I: INVESTIGATE CAUSE OF COMPRESSOR STALL OR SURGE		
	<u>POWER PLANT</u> 1. Examine the induction fairing for blockage. If the induction fairing is found obstructed, refer to appropriate Rolls-Royce Operation and Maintenance Manual for further maintenance action. If no blockage is found, do step 2. 2. Remove the induction fairing and examine the compressor intake area as follows: • The compressor rotor for contamination. If contamination is found, perform a compressor wash. Refer to applicable BHT-206L-MM, Chapter 71 . • Inspect compressor rotor for foreign object damages in accordance with appropriate Rolls-Royce Operation and Maintenance Manual for proper action. 3. If step 1 and step 2 do not reveal an obvious cause for stall or surge, refer to appropriate Rolls-Royce Operation and Maintenance Manual for further maintenance action.		

CONDITIONAL INSPECTIONS

5-57. ENGINE COMPRESSOR STALL OR SURGE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH	OTHER
Chapter 63 Chapter 65	NOTE Removal or dismantling of components is not required while performing the following inspection. PART II: INSPECTION FOR COMPRESSOR STALL OR SURGE WITHOUT NOTICEABLE YAW <u>DRIVE SYSTEM</u> 1. Examine the chip detectors of the transmission, freewheel assembly, and the tail rotor gearbox. If the chip detector shows signs of metal particles, perform a serviceability check. Components that fail the serviceability check shall be removed. Make an entry on the applicable components Historical Service Record and attach a tag and write, "THIS COMPONENT WAS REMOVED FROM SERVICE BECAUSE OF A COMPRESSOR STALL/SURGE". Send the component to an approved facility for overhaul. 2. Examine the tail rotor driveshafts for condition and security of attachment. 3. Examine the tail rotor disc pack couplings for cracks or gapping greater than 0.015 inch (0.38 mm). 4. Examine the tail rotor steel driveshaft and adapters for structural failure or distortion exceeding specified limits. 5. Examine the bond lines on all bonded tail rotor driveshaft adapters (if installed) for any evidence of cracks and voids. 6. If any defect is detected in step 2 through step 5, all bonded tail rotor driveshafts shall be considered unserviceable and discarded. 7. Examine the tail rotor driveshaft segments having riveted adapters (if installed) for condition. 8. Examine the oil cooler shaft and fwd short shaft for condition. 9. Examine the engine-to-transmission driveshaft for condition.		

5-57. ENGINE COMPRESSOR STALL OR SURGE (CONT)

5-00-00
Page 182 Rev. 16 25 FEB 2011 ECCN EAR99

CONDITIONAL INSPECTIONS

5-57. ENGINE COMPRESSOR STALL OR SURGE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	2. If any blade has visible damage suspected to be related to the stall or surge, make an entry on the Historical Service Record and attach a tag on blades and write, "THIS BLADE WAS REMOVED FROM SERVICE BECAUSE OF A COMPRESSOR STALL/SURGE." Send the blade(s) to a Bell Helicopter Textron approved rotor blade repair facility for further inspection and repair. 3. If no defects were detected on any blade, the blade(s) are serviceable. NOTE This inspection does not require disassembly or removal from the helicopter. 4. Examine the main rotor hub for condition. If any damage is suspected to be related to the stall or surge, remove the main rotor hub assembly. Make an entry on the Historical Service Record and attach a tag on the main rotor hub and write, "THIS MAIN ROTOR HUB ASSEMBLY WAS REMOVED FROM SERVICE BECAUSE OF A COMPRESSOR STALL/SURGE." Send the component to an approved facility for overhaul. 5. If no defects were detected on main rotor hub, the main rotor hub is serviceable. 6. If defects are detected in step 1, step 2, and step 4 through step 5, discard all bonded tail rotor driveshafts and perform a main rotor sudden stoppage inspection. <u>SPECIAL INSPECTION</u> After 25 hours of operation, examine chip detectors of transmission, freewheel assembly, and tail rotor gearbox. If the chip detector shows signs of metal particles, perform a serviceability check. Components that fail the serviceability check shall be removed. Make an entry on the applicable components Historical Service Record and attach a tag and write "THIS COMPONENT WAS REMOVED FROM SERVICE BECAUSE OF A COMPRESSOR STALL/SURGE". Send the component to an approved facility for overhaul.		

5-57. ENGINE COMPRESSOR STALL OR SURGE (CONT)

BHT-206L-CR&O

CONDITIONAL INSPECTIONS

5-57. ENGINE COMPRESSOR STALL OR SURGE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	<u>TRANSMISSION ASSEMBLY</u> 1. Remove the transmission input pinion and triplex bearing. 2. Inspect the following gear teeth for scoring and other mechanical damage. a. Input pinion gear. b. Main input driven bevel gear. 3. If any damage suspected to be related to the stall or surge is found, make an entry on the Historical Service Record and attached a tag on the transmission assembly and write, "THIS COMPONENT WAS REMOVED FROM SERVICE BECAUSE OF A COMPRESSOR STALL". Send the component to an approved facility for overhaul. 4. If no defects were detected on the gears, the transmission assembly is serviceable.		
	<u>TAIL ROTOR GEARBOX</u> 1. Remove the tail rotor gearbox input pinion. 2. Inspect the following gear teeth for scoring and other mechanical damage. a. Input pinion gear. b. Spiral bevel gear. 3. If any damage suspected to be related to the stall or surge is found, make an entry on the Historical Service Record and attach a tag on the tail rotor gearbox and write, "THIS COMPONENT WAS REMOVED FROM SERVICE BECAUSE OF A COMPRESSOR STALL". Send the driveshaft to an approved facility for overhaul. 4. If no defects were detected on the gears, the tail rotor gearbox is serviceable.		

5-57. ENGINE COMPRESSOR STALL OR SURGE (CONT)

5-00-00

CONDITIONAL INSPECTIONS

5-58. LIGHTNING STRIKE

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ NOTE This inspection must be accomplished after helicopter is suspected of receiving a lightning strike. <u>LIGHTNING STRIKE</u> NOTE In all of the following instances, if significant damage has been found in any area, inspection shall be expanded in that area until it extends beyond the zone of damage. Scrap any component that shows evidence of arc burns. Because lightning behavior is difficult to predict, conduct a thorough inspection of the entire helicopter. Lightning damage may appear as burn marks, heat discoloration, arc marks, or small weld marks (where metal has melted and resolidified). Honeycomb and other composite materials may exhibit delamination.		

CONDITIONAL INSPECTIONS

5-58. LIGHTNING STRIKE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
	1. Visually inspect all external surfaces of the helicopter paying particular attention to main rotor blades and hub, main rotor mast and controls, transmission and nodal beam, power plant and mounts, main and tail rotor driveshafts, tail rotor gearbox, tail rotor blades and hub, vertical and auxiliary fins, and horizontal stabilizer. Inspect landing gear skid tubes, crosstubes and their fuselage attachment points. Check electrical instruments and systems. Replace defective and/or damaged parts. 2. If visual indications of damage are present, proceed as follows: NOTE Components removed from helicopter for inspection, following a lightning strike, shall be evaluated as an interrelated group. Make entries in component records to cross-reference part and serial numbers of other drive system components removed for evaluation. a. Inspect main rotor blades. Blades that exhibit severe arcing shall be scrapped. Blades that exhibit light to moderate arcing shall be returned to a Bell Helicopter Textron authorized repair station for evaluation and possible repair. (1) Inspect blades for signs of burns and arcing at tip cap, root end closure, buffer pads, and blade bolt bushings. Burn marks can be very minute. (2) Inspect main rotor blade bonded areas for debonding. b. Remove main rotor hub for overhaul. State lightning strike as reason for removal. c. Remove main driveshaft, freewheel assembly, transmission, and mast assembly for overhaul, making note of lightning strike as reason for removal. d. Inspect tail rotor blades and hub. Scrap blades if indications of burns or debonding are found. Remove tail rotor hub for overhaul. State lightning strike as reason for removal.		

CONDITIONAL INSPECTIONS

5-58. LIGHTNING STRIKE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	e. Remove tail rotor driveshaft bearing hangers and tail rotor gearbox and return for overhaul. State lightning strike as reason for removal. f. Check auxiliary fins for evidence of burning or debonding. g. Inspect tailboom fitting for indication of arcing burns around mounting points of tail rotor gearbox and vertical fin. 3. If no indications of damage are found: NOTE If no visual indications of damage are shown, check all ferrous dynamic components by magnetometer. If magnetism is present, perform procedure in step 2. Demagnetize all parts. a. Remove main rotor grips. (1) Visually inspect needle bearings for signs of electrical arcing, burning, or delamination. (2) Visually check pitch horns and trunnion bearing connections for arcing burns.		
	(3) If indications of arcing or burning are present, overhaul main rotor hub and drive assembly. Replace the affected pitch change link including all attaching hardware.		
	(4) If no indications are found, assemble main rotor hub.		
	b. Remove main rotor mast assembly. Without removing bearing from mast, inspect visible portions of bearing for signs of electrical arcing or burning. Rotate bearing during inspection. Check bearing for smooth rotation. Visually inspect the lower mast bearing race and driving spline on the mast for signs of arcing or burning. If indications of arcing, burning, or roughness of the bearing are present, remove transmission, mast assembly, and freewheel assembly and return for overhaul. State lightning strike as reason for removal.		

CONDITIONAL INSPECTIONS

5-58. LIGHTNING STRIKE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
BHT-206L-CR&O	c. Remove transmission top case and inspect for entry and exit of lightning strike. Special attention should be given to the planetary pinion and sun gear, ring gear, spiral bevel gear, and quill pinion. Check all bearings for smooth rotation and damage. Replace all parts that exhibit signs of arcing. If no indications of arcing are found, assemble transmission and mast assembly and return to limited service. After 5 hours, remove the chip detectors and filter and inspect for chips. If no indications are found, return transmission to full service. If indications are found, remove transmission, mast assembly, and freewheel assembly and return for overhaul. State lightning strike as reason for removal. d. Inspect nodal/beam transmission mount fittings and engine mounts. (1) Visually inspect exterior surfaces for evidence of arcing or burning. Special attention should be given to contact surfaces of transmission and engine to their mounting systems, and of mounting systems to the airframe.		
BHT-206L-CR&O	(2) If indications of arcing or burning are present, overhaul parts. e. Remove input quill assembly from tail rotor gearbox. Visually inspect gear teeth for signs of electrical arcing or burning. Rotate tail rotor mast to check for smooth rotation of bearings. (1) If evidence of arcing or burning is found or if bearings do not rotate smoothly, remove gearbox and return it for overhaul. State lightning strike as reason for removal.		
BHT-206L-CR&O	(2) If no indications of damage are found, and if bearings rotate smoothly, assemble gearbox and return it to limited service. After 5 hours, remove chip detector and inspect for chips. If no indications are found, return gearbox to full service. If indications are found, return gearbox for overhaul. State lightning strike as reason for removal.		

CONDITIONAL INSPECTIONS

5-58. LIGHTNING STRIKE (CONT)

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL	
		MECH	OTHER
BHT-206L-CR&O	f. Inspect main driveshaft male and female couplings for evidence of arcing or burning on all gear teeth. If no evidence of arcing is found, assemble driveshaft and return to service. Parts that exhibit arcing or burning shall be scrapped. On 206L3+ IGW Upgrade helicopters, inspect KAflex main driveshaft for evidence of arcing or burning. If no evidence of arcing or burning is found, return to service. KAflex main driveshafts that exhibit arcing or burning shall be scrapped. (1) If indications of arcing or burning are found on the main driveshaft or on any component of the tail rotor driveshaft installation, return freewheel assembly for overhaul. State lightning strike as reason for removal.		
BHT-206L-CR&O	g. Disassemble swashplate and support assembly. Visually inspect for evidence of burning or arcing. Inspect bearings for smooth rotation, and all hardware for evidence of arcing.		
BHT-206L-CR&O	(1) If indications of arcing or burning are present or if bearings do not rotate smoothly, overhaul swashplate assembly. Replace the affected hardware.		
BHT-206L-CR&O	(2) If no indications are found, assemble swashplate assembly and return to service.		
Rolls-Royce 250-C30P Series Operation and Maintenance Manual, 14W2	h. Inspect tailboom, horizontal stabilizer, and auxiliary fins and vertical fin for evidence of arcing, burning, or debonding, paying particular attention to area around the mounting points for the tail rotor driveshaft hangers and tail rotor gearbox.		
	i. Inspect the power plant assembly.		

CONDITIONAL INSPECTIONS

5-59. ENGINE OVERTEMP

DATA REFERENCE	INSPECTION TASK DESCRIPTION	INITIAL MECH OTHER	
Rolls-Royce 250-C30P Series Operation and Maintenance Manual, 14W2	DATE: _____ W.O. _____ FACILITY: _____ HELICOPTER S/N: _____ REGISTRY NO.: _____ TOTAL TIME: _____ SIGNATURE: _____ <u>ENGINE OVERTEMP</u> — Inspect. Perform hot end inspection of power plant assembly if start or transient turbine outlet temperature limits have been exceeded.		

COMPONENT OVERHAUL SCHEDULE

5-60. COMPONENT OVERHAUL SCHEDULE

The Component Overhaul Schedule (Table 5-4) provides the time interval between overhaul for each applicable helicopter component.

WARNING

DO NOT APPLY TOLERANCES TO PARTS WITH A LIMITED AIRWORTHINESS LIFE (CHAPTER 4).

WARNING

DO NOT EXCEED RETIREMENT LIFE FOR CRITICAL COMPONENTS. REFER TO AIRWORTHINESS LIMITATIONS SCHEDULE (CHAPTER 4).

SOME PARTS INSTALLED AS ORIGINAL EQUIPMENT ON MILITARY HELICOPTERS MAY HAVE A LOWER AIRWORTHINESS LIFE AND/OR OVERHAUL SCHEDULE THAN WHEN USED ON A COMMERCIAL HELICOPTER. CONSEQUENTLY, PARTS THAT HAVE BEEN USED ON MILITARY HELICOPTERS SHOULD NOT BE USED ON COMMERCIAL HELICOPTERS.

CAUTION

OVERHAUL SCHEDULE FOR SOME KIT COMPONENTS AND/OR PARTS IS NOT COVERED IN THIS SCHEDULE. REFER TO APPLICABLE [SERVICE INSTRUCTIONS](#) FOR KIT COMPONENTS SCHEDULE.

NOTE

Refer to [paragraph 5-6](#) for information on inspection and overhaul tolerance.

NOTE

Neither assignment of a time period for overhaul of a component or failure to assign a time period for overhaul of a component constitutes a warranty of any kind. The only warranty applicable to helicopter and any component is that warranty included in the Purchase Agreement for the helicopter or component.

The overhaul interval specified for any given part number contained in this Component Overhaul Schedule applies to all successive dash numbers for that item unless otherwise specified.

Table 5-4. Component Overhaul Schedule

NOMENCLATURE	PART NUMBER 	OVERHAUL INTERVAL (HOURS)
MAIN ROTOR CONTROLS		
Swashplate and Support Assembly	206-010-450-101	4800 hours
MAIN ROTOR HUB		
Main Rotor Hub Assembly	206-011-100-105	2400 hours

Table 5-4. Component Overhaul Schedule (Cont)

NOMENCLATURE	PART NUMBER 	OVERHAUL INTERVAL (HOURS)
POWER TRAIN		
Transmission Assembly	206-706-045-103/-107/-111	 3000 hours
Transmission Assembly	206-040-004-101	4500 hours
Main Rotor Mast Assembly	206-040-014-101	3000 hours
Freewheel Assembly	206-040-270-009	 2400 hours
Freewheel Assembly	206-040-270-009	 3000 hours
Input Driveshaft	206-340-300-101/-105	 2500 hours
Freewheel Assembly	406-040-500-113	 3000 hours
TAIL ROTOR SYSTEM		
Tail Rotor Hub Assembly	206-011-810-125	2500 hours
Tail Rotor Gearbox	206-040-402-003	6000 hours
HYDRAULIC SYSTEM		
Hydraulic Servo Actuators	206-076-062-001	1200 hours
Hydraulic Servo Actuators	206-076-062-003/-005/-101	3600 hours
POWER PLANT		
Turboshaft Engine	250-C30P	Refer to Rolls-Royce 250-C30P Operation and Maintenance Manual, 14W2
STARTER GENERATORS		
Starter Generator	ALL	1000 hours
NOTES:		
	The operating time specified for overhaul of any given part number contained in this component overhaul schedule applies to all successive dash numbers for that item unless otherwise specified.	
	If increased power kit (BHT-206-SI-2039) is installed, overhaul interval is 3000 hours.	
	Freewheel assembly with clutch CL41742-1.	

Table 5-4. Component Overhaul Schedule (Cont)

NOMENCLATURE	PART NUMBER 	OVERHAUL INTERVAL (HOURS)
NOTES (CONT):  Freewheel assembly with clutch CL42250-1.  As applicable to 206L3+ IGW Upgrade Kit (BHT-206-SI-2052), input driveshafts 206-340-300-101/-105 must be overhauled at 5000 hours of operation and every 2500 hours of operation thereafter. Overhaul is to be accomplished by Kamatics Corporation only. Return driveshaft to Bell Helicopter Textron (BHT) per Information Letter (IL) GEN-04-98.  As applicable to 206L3+ IGW Upgrade Kit (BHT-206-SI-2052).		

